


# Parts List

## model 2185

(All other parts same as basic Series 218)

<b>123</b>	Foot
<b>133A</b>	Reference Hour Hand
<b>208</b>	Clutch Wheel
<b>305</b>	Date and Set Bridge Screw
<b>321</b>	Date Corrector Detent Screw
<b>451</b>	Cam Screw
<b>452</b>	Spring Washer
<b>569</b>	Date Corrector
<b>570</b>	Date Corrector Detent
<b>571</b>	Date Bridge
<b>572</b>	Date Indicator Detent
<b>573</b>	Date Indicator Detent Spring
<b>574</b>	Date Trip Wheel Assembly
<b>576</b>	Date Indicator
<b>579</b>	Center Wheel Assembly
<b>580</b>	Minute Wheel Assembly
<b>581</b>	Date Trip Arm
<b>582</b>	Date Trip Spring
<b>623</b>	Foot
<b>625</b>	Planetary Hour Wheel Assembly
<b>630</b>	Geneva Wheel
<b>631</b>	Cam Assembly
<b>633</b>	Geneva Wheel Stop Disc
<b>634</b>	Geneva Wheel Spring
<b>635</b>	Cam Gear
<b>636</b>	Transfer Gear Assembly
<b>637</b>	Hour Setting Wheel
<b>640</b>	Intermediate Wheel Assembly
<b>641</b>	Drive Gear Assembly
<b>642</b>	Cam Spring
<b>643</b>	Cam Spring Screw
<b>644</b>	Setting Bridge Assembly
<b>648</b>	Hour Setting Stem
<b>649</b>	Stem Locking Spring
<b>650</b>	Hour Wheel
<b>660</b>	Hour Indicator Disc Assembly

**NOTE:** The above listed parts are illustrated on pages 59, 60, 62, 63, 64 and 65.

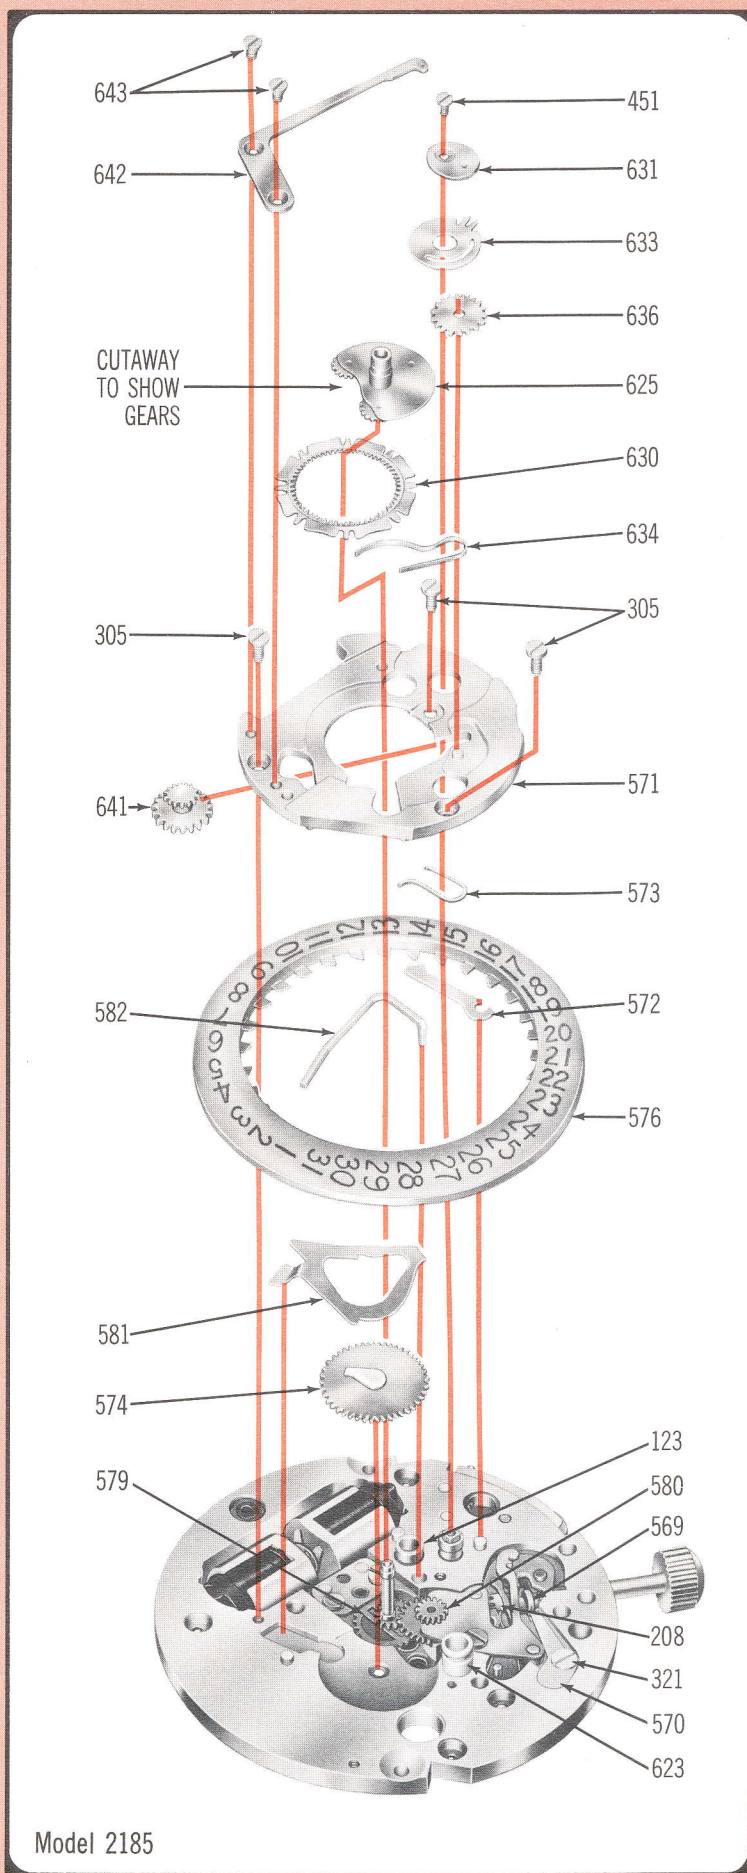

Model 2185

Fig. 58

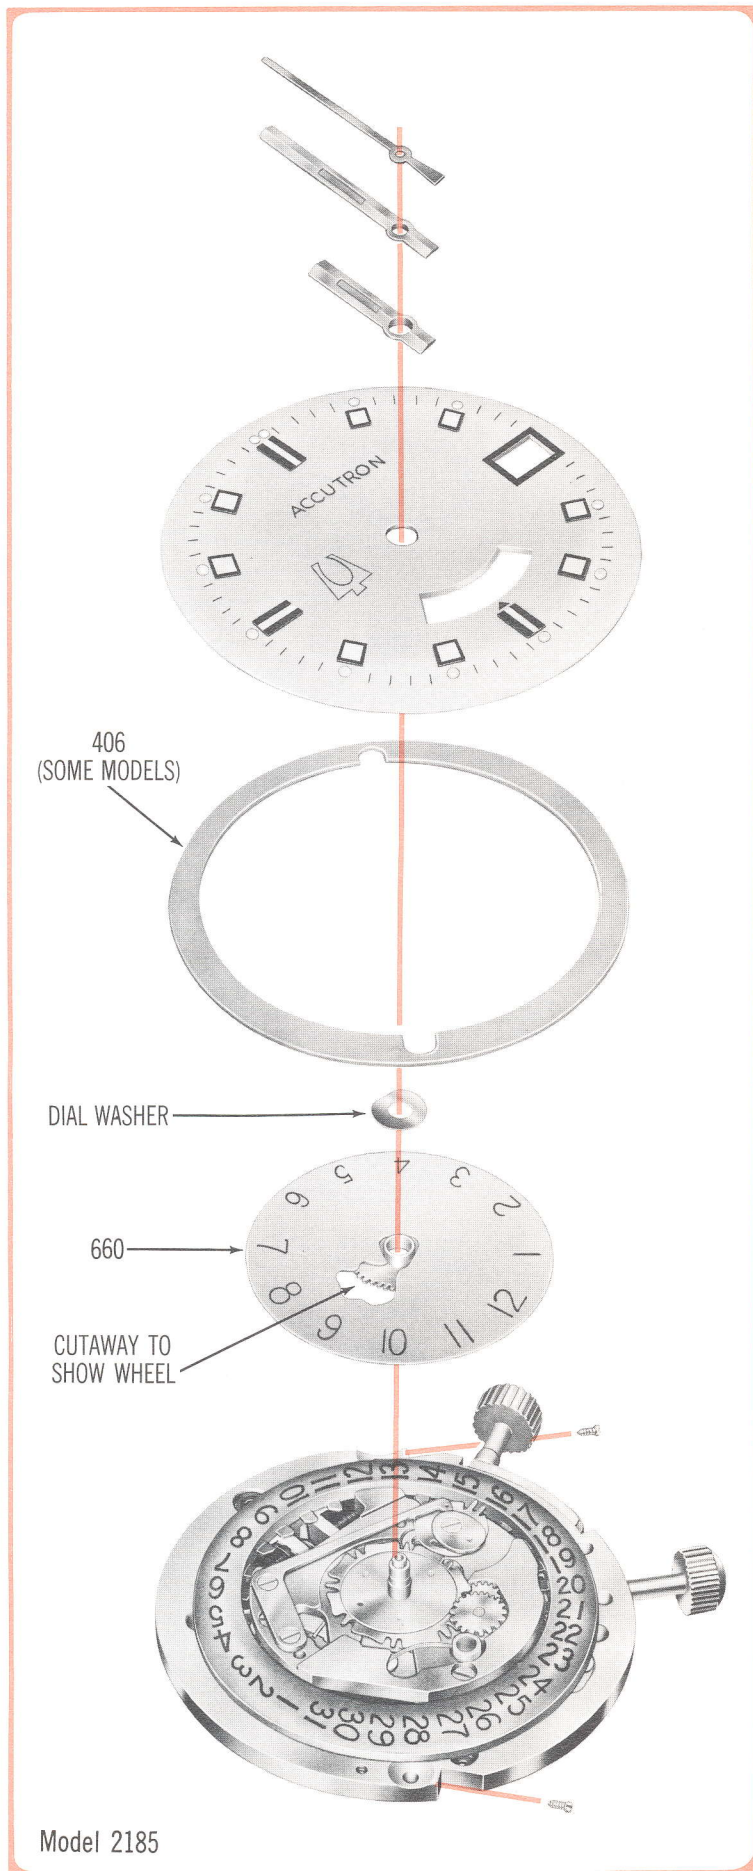


Fig. 57

1

## Removing hands, dial, and hour wheel

(Refer to figure 56 or 57, whichever is appropriate)

- a. Pull time setting stem "out" (setting position).
- b. Remove hands.
- c. Remove dial (2 screws) and dial support #406, if used.
- d. Remove hour wheel #650 or hour indicator disc assembly #660 (depending upon dialing) with dial washer.

**IMPORTANT:** Be sure to indicate model number engraved on movement when ordering replacement parts.