


Parts No.	Name of parts	Caliber No. & Nos. of Jewels								
		6500-17	6500-21	6501-17	6501-21	6000-17	6000-21	6001-17	6001-21	6080-16
701	Barrel and train wheel bridge	172	225 (173)	172	225 (173)	172	225 (173)	172	225 (173)	224
708	Pallet cock	056	○	○	○	○	○	○	○	○
709	Balance cock	136 (111)	○	○	○	○	○	○	○	135
711	Center wheel cock	055	○	059	○	055	○	059	○	056
002	Mainspring	55	○	61	○	55	○	61	○	58
008	Barrel with arbor	50	○	○	○	○	○	○	○	54
009	Barrel arbor	37	○	○	○	○	○	○	○	○
012	Center wheel and pinion with cannon pinion	90	○	○	○	83	○	○	○	○
017	Third wheel and pinion	55	○	○	○	○	○	○	○	○
023	Fourth wheel and pinion	86	○	○	○	89	○	○	○	○
032	Escape wheel and pinion	89	○	○	○	○	○	○	○	○
035	Jeweled pallet fork and staff	47	○	○	○	○	○	○	○	○
039	Balance with hairspring, regulated	77	○	85	○	77	○	85	○	77
043	Balance staff	43	○	○	○	○	○	○	○	○
044	Roller, with jewel	02	○	○	○	○	○	○	○	○
051	Regulator	63	○	○	○	○	○	○	○	○
219	Stud holder	09	○	○	○	○	○	○	○	○
057	Crown wheel ring	31	○	○	○	○	○	○	○	○
058	Crown wheel	30	○	○	○	○	○	○	○	○
059	Ratchet wheel	47 (46)	○	○	○	○	○	○	○	○
119	Oscillating weight, complete	119	121	119	121	119	121	119	121	119
206	Intermediate pawl winding wheel	02	○	○	○	○	○	○	○	○
141	Pawl winding wheel, complete	13	○	14	○	13	○	14	○	○
088	Reduction wheel and pinion	05	○	06	○	05	○	06	○	○
138	Driving gear for ratchet wheel	13	○	14	○	13	○	14	○	○
	Screw for barrel and train wheel bridge	924-40	○	○	○	○	○	○	○	○
	Balance cock screw	○	○	○	○	○	○	○	○	○
	Screw for center wheel cock	922-66	○	○	○	○	○	○	○	○
	Pallet cock screw	○	○	○	○	○	○	○	○	○
	Driving gear screw for ratchet wheel	○	○	○	○	○	○	○	○	○
	Crown wheel screw	924-41	○	○	○	○	○	○	○	○
	Ratchet wheel screw	924-43	○	○	○	○	○	○	○	○
	Hairspring stud screw	920-01	○	○	○	○	○	○	○	○
	Case screw	925-27	○	○	○	○	○	○	○	○
	(PS) Upper cap jewel, mounted	094-01	○	○	○	○	○	○	○	○
	(PS) Spiral spring with jewel	098-09	○	○	○	○	○	○	○	○
	(PS) Upper end-piece	091-20	○	○	○	○	○	○	○	○

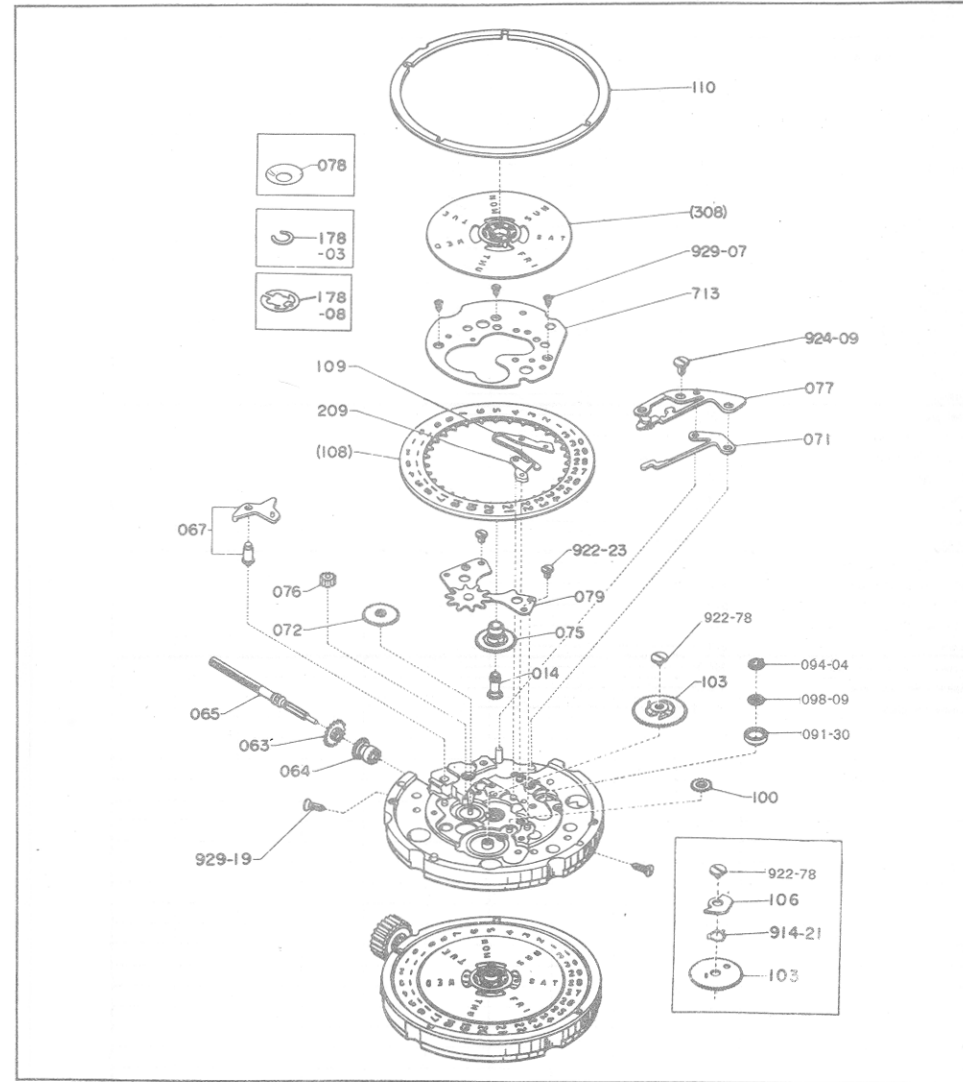

1. The above EXPLODED VIEW OF MOVEMENTS can also be used for caliber numbers without day mechanism.
2. Even when the shape of a particular part in your movement differs from that of the part shown in the EXPLODED VIEW OF MOVEMENTS, the number will be the same, if the part is used for the same purpose.
3. For Parts No. 108 (DATE DIAL), 308 (DAY DIAL), see the CITIZEN PARTS CATALOG FOR APPEARANCE PARTS.

Parts No.	Name of parts	Caliber No. & Nos. of Jewel				
		6500-17 6500-21	6501-17 6501-21	6000-17 6000-21	6001-17 6001-21	6080-16
063	Winding pinion	23	○	○	○	○
064	Clutch wheel	24	○	○	○	36
065	Winding stem	107	○	○	○	○
067	Setting lever (with axle)	46	○	○	○	○
071	Yoke	35	○	○	○	36
072	Minute wheel and pinion	07	○	○	○	○
014	Cannon pinion	82	○	80	○	○
075	Hour wheel	85	93	83	○	○
076	Setting wheel	29	○	○	○	○
077	Setting lever spring	44	○	○	○	46
079	Minute wheel guard	27	○	29	○	○
110	Dial guard ring	07	○	○	○	○
178	Day dial gib	03	08	○	○	○
078	Dial washer			07	○	○
713	Date dial guard	041	○	○	○	○
100	Intermediate date wheel	10	○	○	○	○
103	Date dial driving wheel	33	40	33	40	○
914	Date finger spring	21		21		
106	Date finger	30		30		
109	Date jumper	22	○	○	○	
209	Day jumper	14	○	○	○	
	Screw for setting lever spring	924-09	○	○	○	○
	Screw for minute wheel guard	922-23	○	○	○	○
	Screw for date dial guard	929-07	○	○	○	○
	Screw for date dial driving wheel	922-78	○	○	○	○
	Dial screw	929-19	○	○	○	○
	(PS) Lower cap jewel, mounted	094-04	○	○	○	○
	(PS) Spiral spring with jewel	098-09	○	○	○	○
	(PS) Lower end-piece	091-30	○	○	○	○

Note: (PS) Parashock

Parts No.	Name of parts	Caliber No. & Nos. of Jewel				
		6000-17 6500-17	6001-17 6501-17	6000-21 6500-21	6001-21 6501-21	6080-16
	Center-W/U	944-57	○	○	○	○
	Center-W/L	944-42	○	○	○	○
	3rd-W/U	941-25	○	○	○	○
	3rd-W/L	○	○	○	○	○
	4th-W/U	941-59	○	○	○	○
	Escape-W/U	941-38	○	○	○	○
	Escape-W/L	○	○	○	○	○
	Pellet-S/U	942-10	○	○	○	○
	Pellet-S/L	○	○	○	○	○
	Driving gear/U	945-05	○	○	○	○
	Intermediate pawl winding-W/U	950-45	○	941-34	○	○
	Intermediate pawl winding-W/L	950-119	○	941-41	○	○
	Pawl winding-W/U	950-67	○	941-34	○	○
	Pawl winding-W/L	950-119	950-45	941-41	○	○