

Calibre 4130

Ø30.50mm
Ht: 6.50mm
Train: 28.800

- Selfwinding Chronograph with hour counter
- Shock Proof
- 44 Jewels

Base Calibre 4130













Image	Rolex No	Description
	146	Bridle
	166	Screw for bridle
	4494	Spring for in-setting for escape wheel-upper /lower
	95019	Shock-absorber for balance-upper
	95019-1	Shock-absorber for balance-lower
	95019-2	In-setting for balance-upper / lower
	95019-3	Cap jewel for balance-upper / lower
	95019-4	Spring for in-setting for balance-upper /lower
	2130-0913	In-setting for escape wheel-upper /lower
	2130-0913-2	Cap jewel for escape wheel-upper /lower
 	2130-425	Roller











 

Image	Rolex No	Description
	2130-9330	Jewel for: • Reversing wheel-lower • Intermediate wheel-upper / lower
	2130-9421	Jewel for pallet fork-upper /lower
	2230-475	Driving pinion for balance bridge height adjustment
	2230-478	Bridle for balance bridge height adjustment
	2230-5120	Regulating nut for balance bridge height adjustment
	2230-5450	Screw for hairspring bridle
	2235-9100	Jewel for: • Jaw for clutch support • Operating lever support
	3135-5013	Screw for dial
	3135-9310	Jewel for barrel arbor-upper
	3135-9510	Jewel for driving wheel for ratchet wheel support
	4130-100	Main plate
	4130-105	Barrel bridge

 


 
 
 
 



Image	Rolex No	Description
	4130-110	Train wheel bridge
	4130-115	Pallet bridge
	4130-120	Balance bridge
	4130-135	Automatic device lower bridge
	4130-140	Automatic device upper bridge
	4130-142	Automatic device module
	4130-190	Bridge for chronograph
	4130-193	Clutch bridge
	4130-201	Winding stem
	4130-204	Winding pinion



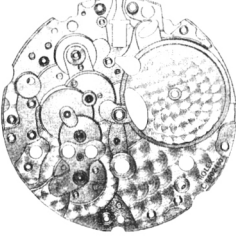

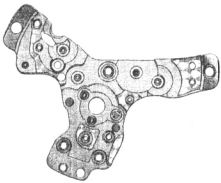

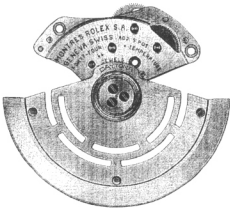


 





Image	Rolex No	Description
	4130-205	Sliding pinion
	4130-209	Crown wheel seating
	4130-210	Crown wheel
	4130-211	Crown wheel core
	4130-212	Core for intermediate crown wheel
	4130-213	Intermediate crown wheel
	4130-217	Yoke for sliding gear
	4130-220	Setting lever
	4130-225	Spring for setting lever
	4130-231	Setting lever jumper
	4130-240	Yoke for sliding pinion
	4130-241	Spring for yoke
	4130-244	Balance stop spring
	4130-249	Setting wheel core
	4130-250	Setting wheel















Image	Rolex No	Description
	4130-256	Bridge for minute train
	4130-260	Minute wheel
	4130-270	Cannon pinion
	4130-280	Hour wheel
	4130-300	Click
	4130-301	Spring for click
	4130-305	Ratchet wheel
	4130-307	Barrel arbor
	4130-310	Barrel with arbor
	4130-311	Mainspring
	4130-335	Centre wheel with cannon pinion
	4130-340	Third wheel
	4130-360	Second wheel
	4130-410	Escape wheel













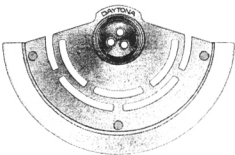 





Image	Rolex No	Description
	4130-419	Pallet staff
	4130-421	Pallet fork
	4130-429	Balance staff
	4130-432	Balance with Breguet hairspring, timed
	4130-450	Stud support
	4130-451	Bridle for stud support
 	4130-510	Driving wheel for ratchet wheel
 	4130-520	Intermediate wheel
 	4130-540	Reversing wheel, mounted
	4130-570	Oscillating weight
 	4130-815	Clutch module
 	4130-820	Chronograph wheel
	4130-822	Friction for chronograph wheel















Image	Rolex No	Description
	4130-825	Intermediate wheel for chronograph
	4130-830	Setting wheel for minute counter
	4130-834	Jumper for counters for chronograph
	4130-840	Minute-counting wheel
	4130-845	Minute wheel for hour counter
	4130-850	Hour counting wheel
	4130-855	Column wheel
	4130-856	Jumper for column wheel
	4130-860	Operating lever
	4130-861	Spring for operating lever
	4130-863	Operating jaw for clutch
	4130-864	Jaw for clutch
	4130-865	Spring for clutch-jaws
	4130-867	Clamp for clutch-jaws











Image	Rolex No	Description
	4130-870	Lever for fly-back
	4130-871	Spring for fly-back lever
	4130-875	Yoke for fly-back
	4130-880	Hammer
	4130-881	Spring for hammer jumper
	4130-883	Hammer jumper
	4130-0945	Friction spring for hour wheel
	4130-5000	Set of screws
	4130-5110	Screw for: <ul style="list-style-type: none"> • Barrel bridge • Train wheel bridge • Bridge for chronograph • Balance bridge • Automatic device module • Jumper for column wheel
	4130-5115	Screw for: <ul style="list-style-type: none"> • Pallet bridge • Bridle for stud support • Bridle for height adjustment for balance bridge • Setting lever spring • Click • Minute train bridge • Setting lever jumper
	4130-5135	Screw for: <ul style="list-style-type: none"> • Clutch bridge • Automatic device bridge lower



























Image	Rolex No	Description
	4130-5142	Screw for automatic device module, long
	4130-5210	Screw for: • Crown wheel • Intermediate crown wheel
	4130-5305	Screw for: • Ratchet wheel • Hammer • Jaw for clutch
	4130-5570	Screw for oscillating weight
	4130-5855	Screw for column wheel
	4130-5875	Screw for yoke for fly-back
	4130-7105	Tapped foot for: • Jumper for column wheel • Barrel bridge • Train wheel bridge • Balance bridge • Bridge for chronograph
	4130-7120	Tapped foot for balance bridge
	4130-7260	Minute wheel stud
	4130-7301	Spring click stud
	4130-7855	Tapped foot for column wheel
	4130-7864	Tapped foot for jaw for clutch
	4130-7875	Tapped foot for yoke for fly-back
	4130-7880	Tapped foot for clutch bridge and for hammer

Image	Rolex No	Description
	4130-9311	Jewel for barrel arbor-lower
	4130-9321	Jewel for centre wheel-upper
	4130-9322	Jewel for centre wheel-lower
	4130-9340	Jewel for: <ul style="list-style-type: none"> • Third wheel-upper • Driving wheel for ratchet wheel-upper • Reversing wheel-upper • Clutch wheel-upper
	4130-9341	Jewel for: <ul style="list-style-type: none"> • Third wheel-lower • Second wheel-upper
	4130-9361	Jewel for: <ul style="list-style-type: none"> • Second wheel-lower • Minute-counting wheel-lower • Hour counting wheel-lower
	4130-9511	Jewel for driving wheel for ratchet wheel-lower
	4130-9816	Jewel for clutch module-lower
	4130-9820	Jewel for minute wheel for hour counter
	4130-9835	Jewel for jumper for counters-lower
	4130-9840	Jewel for: <ul style="list-style-type: none"> • Minute-counting wheel-upper • Wheel for hour counting-upper • Setting wheel for minute counter-upper /lower
	4130-9883	Roller for hammer jumper