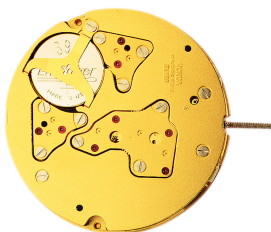
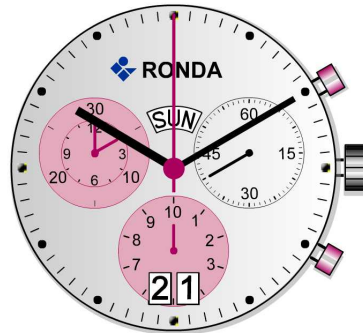


Specification

12 ½"


Dimensions and battery

∅ Total	28.60 mm
∅ Case fitting	28.00 mm
Movement height	4.40 mm
Movement rest	0.60 mm
Height of stem	1.90 mm
Stem: Thread / Distance	0.90 mm / 0.90 mm
Battery / Autonomy	Nr. 395 / 48 Months

Performances


	Small second (M1): 4.0 - 6.7 µNm
Torque T	Minute hand (M1): 200 - 300 µNm
	Counter (M2, M4): 3.0 - 4.6 µNm
	Counter (M3): 1.5 - 2.5 µNm
Operating temperature	0°C - 50°C
Res. against magn. fields	18.8 Oe = 1500 A/m
Resistance against shock	NIHS 91 - 10

Functions


Position I (crown)	Neutral
Position II (crown)	Setting the date (quick mode)
Position III (crown)	Time, weekday
Pusher A	START / STOP / ADD
Pusher B	ZERO POSITIONING / SPLIT




Assembling

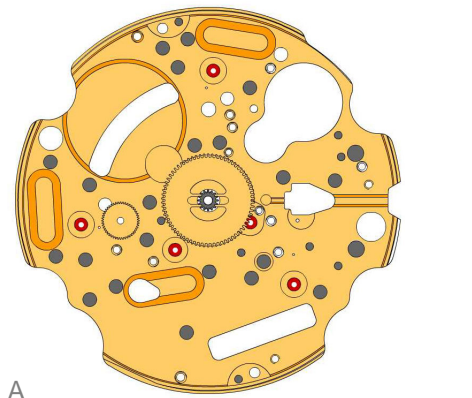




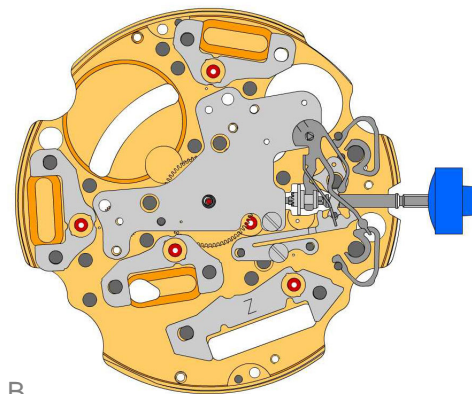



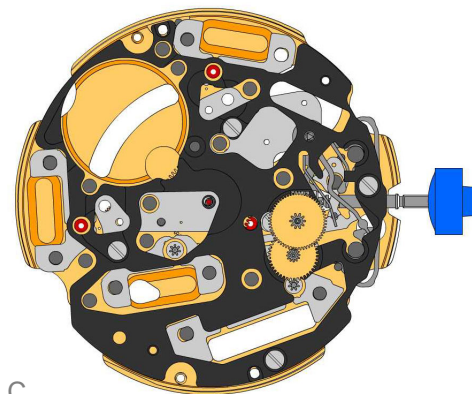









A




B

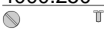

C

1. **3305.282.CO** Cannon pinion with driver (Aig 2)
 Moebius 8200 greace must be placed between the steel tube and the brass wheel. The steel tube must be placed into the center hole of the main plate.
2. **3301.244** Hour wheel (counter 24h)

3. **2030.017.CO** Centre bridge
 Use one screw 4000.250 to fix the center bridge.
4. **3001.041** Sliding pinion
 The sliding pinion must be holded using a tweezers, untill the stem is inserted.
5. **3000.177.CO** Handsetting stem
 Prior to the insertion of the stem, some greace must be placed on the square part of the stem.
6. **3017.049** Setting lever
 The cam on the setting lever must be inserted into the cut out on the stem. (the setting lever must be greaced)
7. **3905.049** Setting lever jumper (3 positions)
 The setting lever jumper (3 positions) must be tensioned and inserted into the setting lever. Use one screw 4000.250 to fix the setting lever.
8. **3015.070** Yoke (3 positions)
 The yoke must be inserted below, into the cutout of the sliding pinion. The oposite end of the yoke must be positioned around the pillar of setting lever. (Use Moebius 8200 to greaced the yoke)
9. **3406.030** Pusher jumper
 2 pieces. Use Jismaa 124 to greace the pusher jumper.
10. **3622.040** Stator

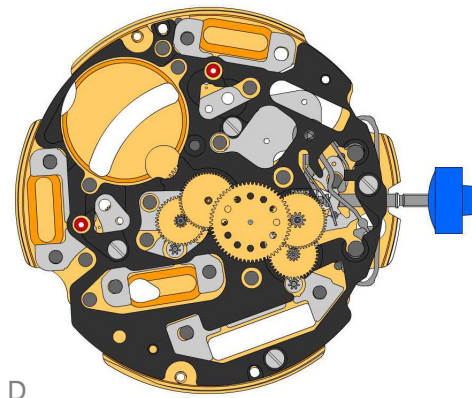11. **3622.039** Stator (counter 6h and 9h and chrono)
 3 pieces
12. **4000.250** Screw

13. **3603.065** Plastic bracket
 Use 4 screws 4000.250
14. **4000.250** Screw

15. **3715.094.RK** Rotor (centre and chrono)
 Use an antimagnetic tweezers to place the 2 rotors.
16. **3147.046.CO** Intermediate wheel

17. **3136.142.CO** Second wheel (long)


Assembling



18. 3147.047.CO Intermediate wheel (chrono)



19. 3136.144.CO Chronograph wheel (Aig 2)



20. 3122.056.CO Third wheel




21. 2020.148 Train wheel bridge



Attention: Prior to the fastening process of the bridge, all 7 pins of the wheels must be visible in the 7 holes in the bridge. Use 3 screws 4000.250.

D

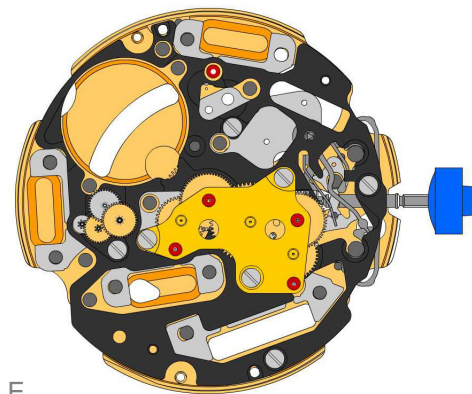

22. 3715.095.RK Rotor (counter 6h and 9h)



Use an antimagnetic tweezers to place the rotor.

23. 3147.048.CO Intermediate wheel (counter)



24. 3007.056.CO Minute wheel (counter 24h)



25. 3402.008.CO Minute counting wheel




26. 2020.149 Counter train wheel bridge



Attention: Prior to the fastening process of the bridge, all 4 pins of the wheels must be visible in the 4 holes of the bridge. Use 3 screws 4000.250.

E

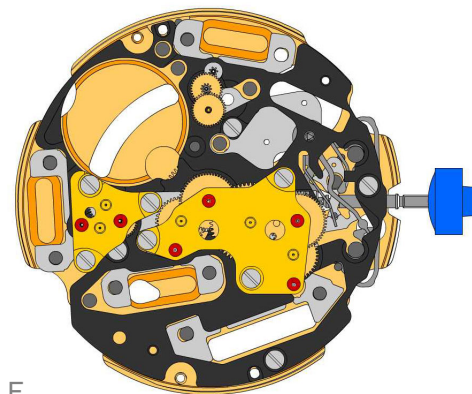

27. 3715.095.RK Rotor (counter 6h and 9h)



Use an antimagnetic tweezers to place the rotor.

28. 3147.053.CO Intermediate wheel (counter 1/10sec)



29. 3402.009.CO Counting wheel 1/10 sec



30. 2020.149 Counter train wheel bridge




Attention: Prior to the fastening process of the bridge, all 4 pins of the wheels must be visible in the 4 holes of the bridge. Use 3 screws 4000.250.

31. 4000.250 Screw




F


Assembling

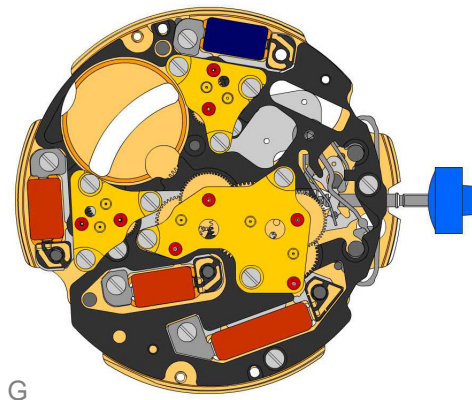

- 32. 9014.000 **Moebius 9014**
Use Moebius 9014 on bearing of all rubis
- 33. 3621.053.RK **Coil**
The wire of the coil (red area) is very sensitiv to mechanical impacts. Hold the coil only outside the red area. Fix the coil by 1screw 4000.250.
- 34. 3621.054.RK **Coil (counter 9h and chrono)**
The wire of the coil (red area) is very sensitiv to mechanical impacts. Hold the coil only outside the red area. Fix each of the 2 coils by 1screw 4000.250.
- 35. 3621.055.RK **Coil (counter 6h)**
The wire of the coil (blue area) is very sensitiv to mechanical impacts. Hold the coil only outside the blue area. Fix the coil by 1screw 4000.250.
- 36. 4000.250 **Screw**

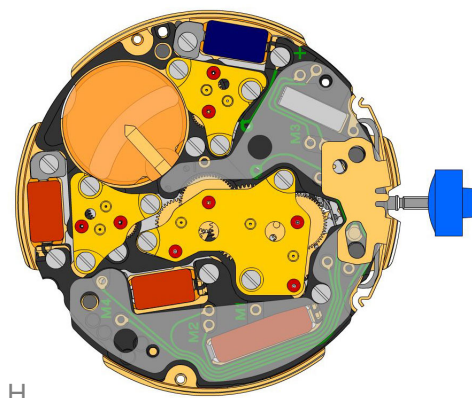


- 37. 3603.034 **Battery insulator**
- 38. 3612.144.5050 **Electronic module**
After assembly of the electronic module it is the best time to perform the electrical measurements. Use 5 screws 4000.248 to fix the electronic module.
- 39. 4000.248 **Screw**
- 40. 3603.069 **Circuit insulator**
- 41. 3601.107 **Pusher contact spring**
Make shure, that the pusher contact spring is placed correctly onto the pillars.

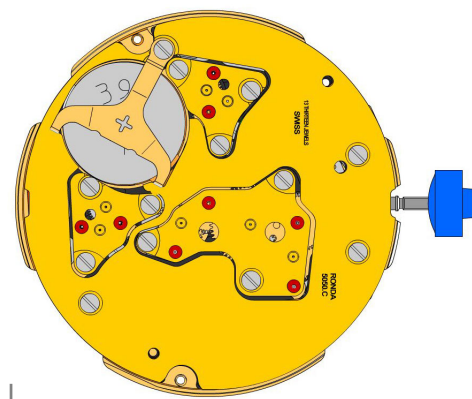

- 42. 2130.137.5050.C **Electronic module cover (counter 6h/9h)**
Make shure, that the pusher contact spring is not displaced during attachment of the electronic module cover. Use 3 screws 4000.250 to fix the electronic module cover
- 43. 3600.010 **Battery**
Use a plastic tweezers to place the battery (to avoid short circuit of battery).
- 44. 3601.109 **Bridle +**
Insert the two brackets of the battery bridle under the electronic module cover and fasten the battery bridle by 1 screw 4000.250.
- 45. 4000.250 **Screw**

Assembling

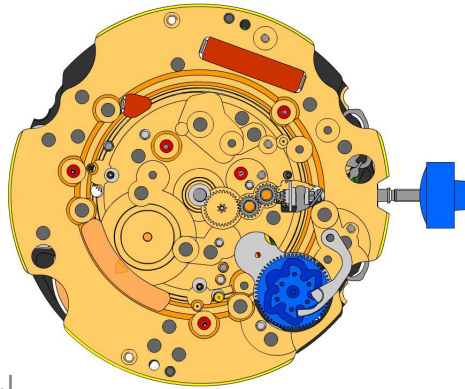

46. 2000.574.CO Main plate



47. 9014.000 Moebius 9014
 Use Moebius 9014 on bearing of all rubis



48. 3004.164 Setting wheel
 Use Moebius 9020 on both setting wheels




49. 3007.054.CO Minute wheel
 Use Moebius 9020



50. 2130.143 Minute train bridge
 Use 2 screws 4000.305



51. 4000.305 Screw

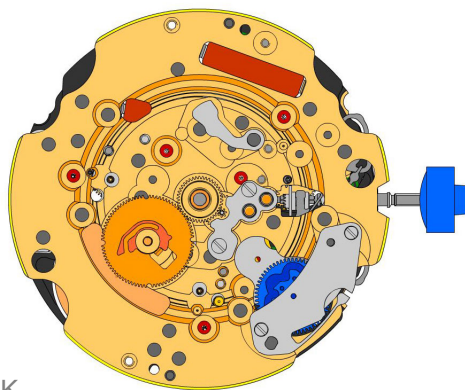

52. 3004.181 Tens indicator driving wheel
 The short tooth of the tens indicator driving wheel must point to the center of the movement.



53. 3500.059 Tens jumper
 Moebius 8200 grease must be placed between the tens jumper and the tens indicator driving wheel.



54. 2130.142 Tens jumper maintaining plate
 Make shure, that the tens indicator driving wheel is not blocked prior to the fastening process. Use 2 screws 4010.306. Place the spring loaded bracket outside of the tens jumper.



55. 4010.306 Screw



56. 3301.242 Hour wheel (Aig 2)
 Use Moebius 9020



57. 3315.016 Hour wheel friction spring
 Must be placed onto the hour wheel




58. 3004.176.CO Date indicator driving wheel
 Moebius 9020 must be used in the center of this wheel




59. 3500.049 Date jumper
 Moebius 8200 grease must be placed between the date jumper and the date jumper spring




Assembling

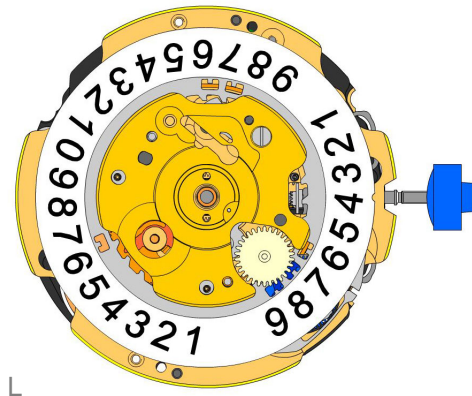



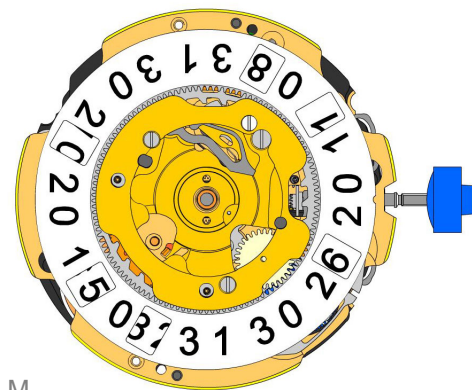



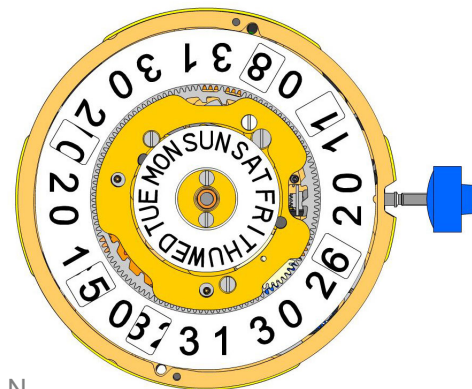












L



M




N


- 60. 3504.214.AD Units indicator

 Teaths must be greaced using Moebius 8200. The "half moon" cut out on the unit indicator must point to the stem (position 3h).
- 61. 3147.054 Tens intermediate wheel

- 62. 2130.163 Date indicator maintaining plate

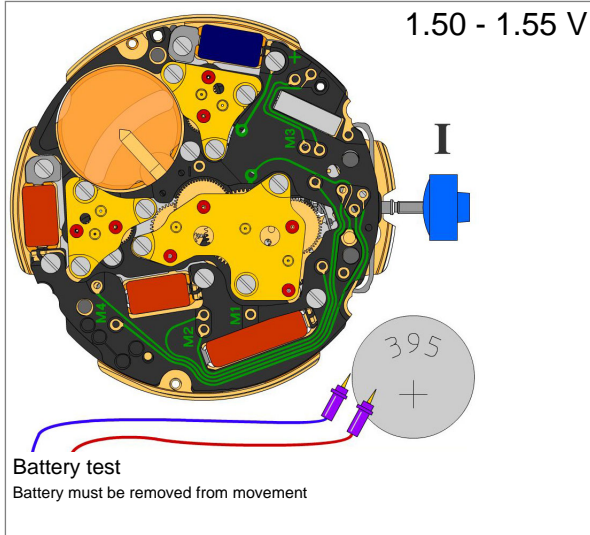 use 1 screw 4000.282
- 63. 3905.050 Date jumper spring

 Insert the spring into the opening of the date indicator maintaining plate
- 64. 3504.215.AD Tens indicator (T3/G12)

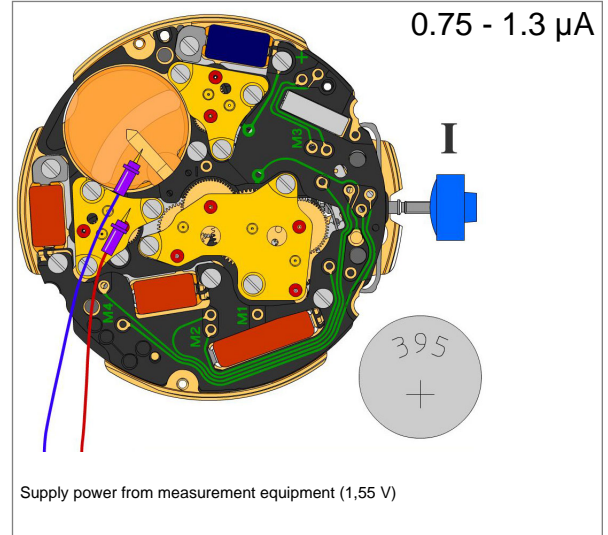 The "half moon" cut out on the tens indicator must point to the stem (position 3h).
- 65. 3500.055 Day jumper

- 66. 3004.175 Day finger

- 67. 2130.162 Date mechanism maintaining plate

 Assure that the tens intermediate wheel is not blocked, prior to the fastening process. Use 2 screws 4000.312 and 1 screw 4000.300 to fix the date indicator maintaining plate.
- 68. 3508.155 Day indicator

- 69. 2130.164 Day indicator maintainin plate

- 70. 3506.072 Dial support

- 71. 4000.250 Screw

- 72. 4000.282 Screw

- 73. 4000.300 Screw

- 74. 4000.311 Screw

- 75. 4000.312 Screw

- 76. 9010.000 Moebius 8200

 Microgliss D5 can be used
- 77. 9018.000 Jismaa 124

 Greace Moebius or Microgliss D5 an be used
- 78. 9020.000 Moebius 9020


Electrical checking


Voltage of battery




Consumption (M1) of movem. (Pos. I)




Consumption (M1) of movem. (Pos. III)

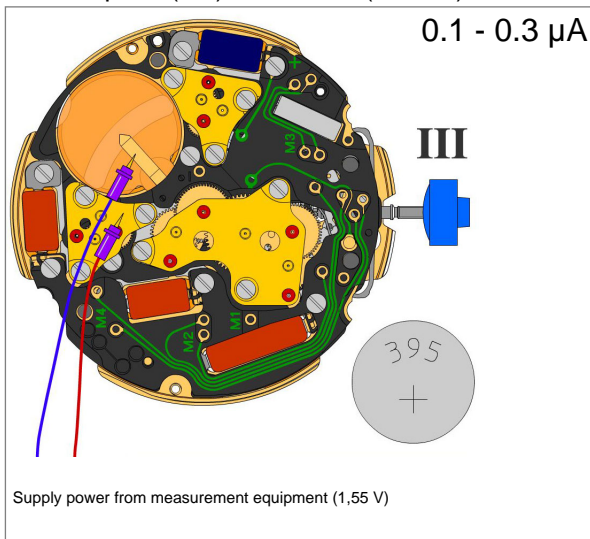


Lowest voltage for movement (M1)

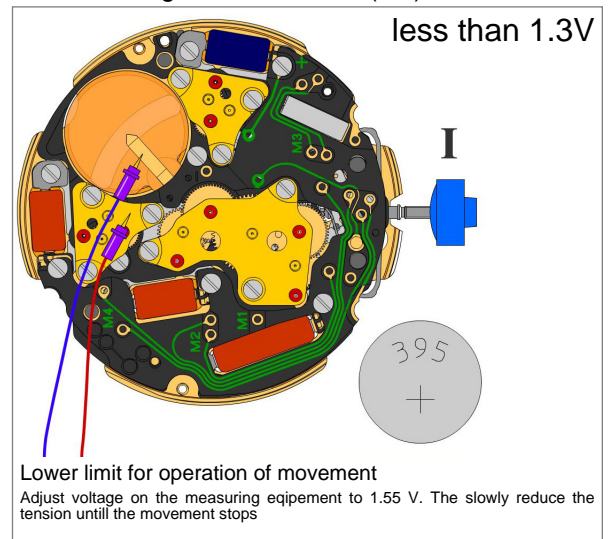

Accuracy (seconds / month)

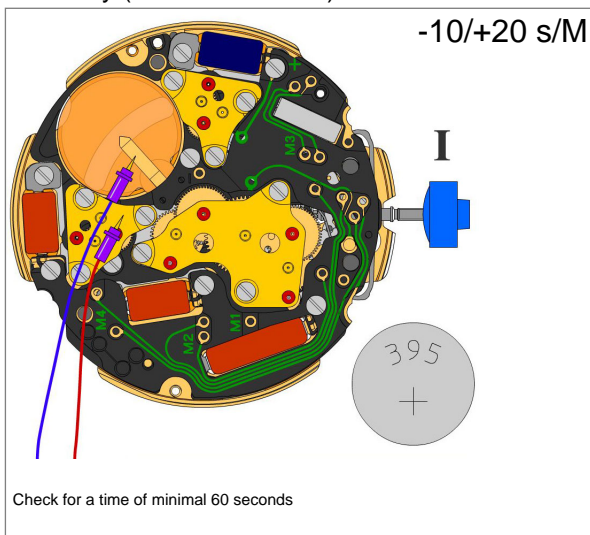


Resistance of the coil: motor 1 (movem.)

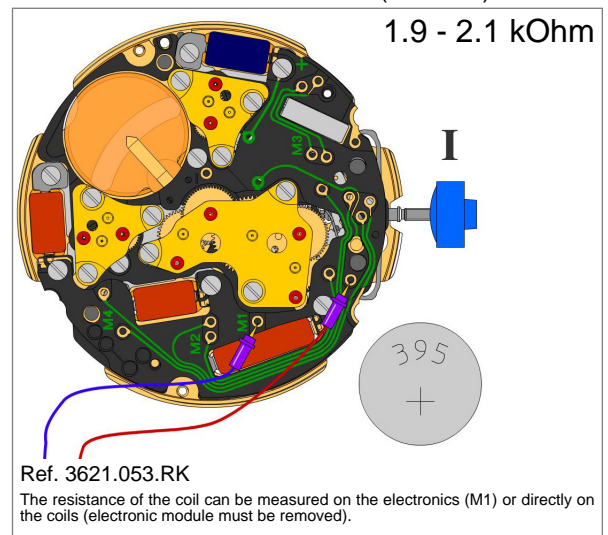

Electrical checking

Resistance of the coil: motor 2 (counter)


2.2 - 2.4 kOhm

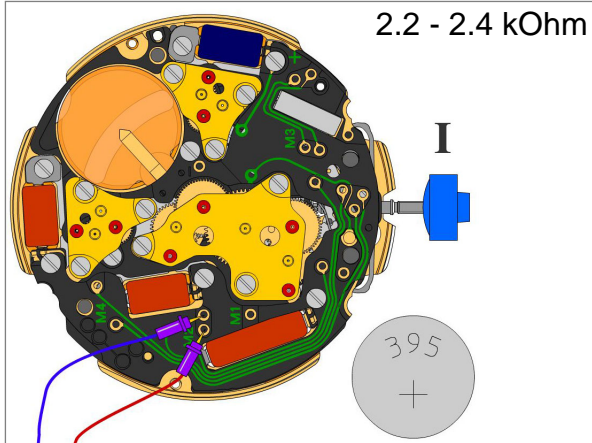

Ref. 3621.054.RK
 The resistance of the coil can be measured on the electronics (M2) or directly on the coils (electronic module must be removed).

Resistance of the coil: motor 3 (counter)


2.2 - 2.4 kOhm

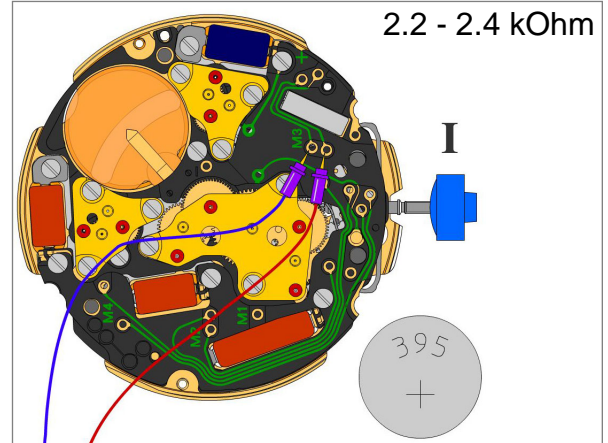

Ref. 3621.055.RK
 The resistance of the coil can be measured on the electronics (M3) or directly on the coils (electronic module must be removed).

Resistance of the coil: motor 4 (counter)


2.2 - 2.4 kOhm

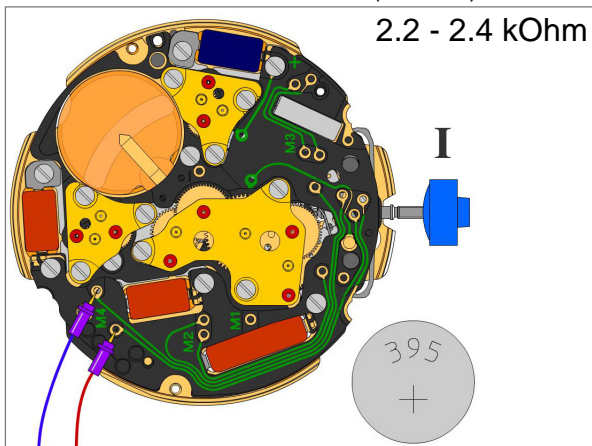

Ref. 3621.054.RK
 The resistance of the coil can be measured on the electronics (M4) or directly on the coils (electronic module must be removed).

Coil insulation: motor 1, 2, 3 and 4


... kOhm

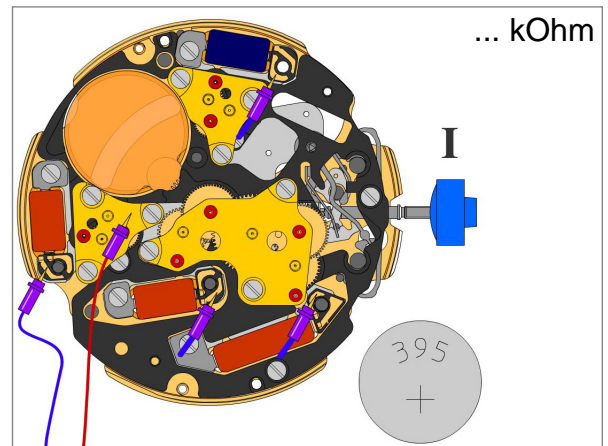


indefinite high
 The resistance between each coil and +pole must be measured (electronic module must be removed)

Test of the motors


Accelerated test of movement (M1)

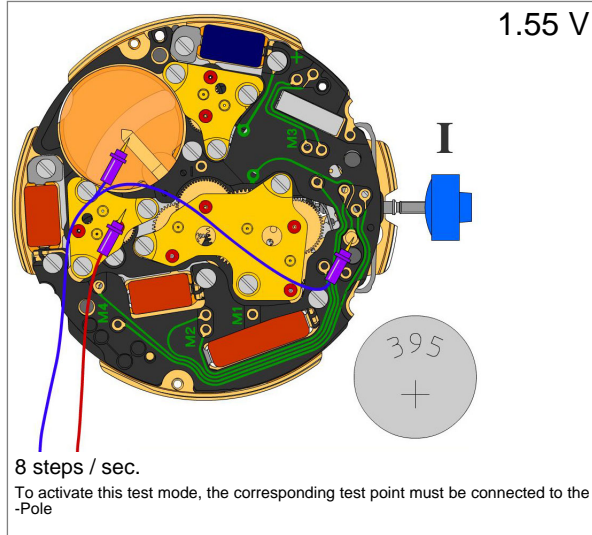

1. Activation of control mode (pos III)

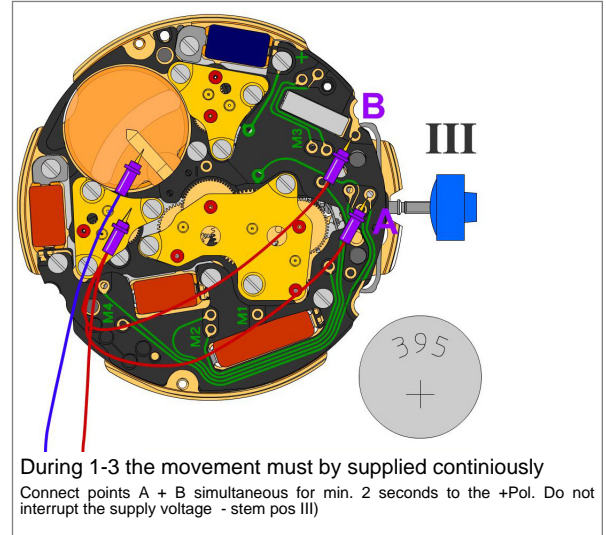

2. Check of active counter

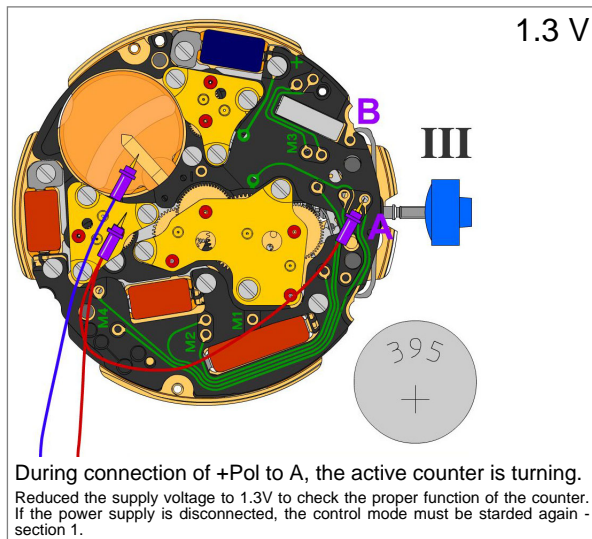

3. Change to the next counter

