

TECHNICAL GUIDE AND PARTS LIST

CAL. Y960

COMBINATION QUARTZ

CONTENTS

| | |
|--|----|
| I. FOREWORD | 1 |
| 1. System reset..... | 1 |
| 2. Notes on circuit block installation | 1 |
| II. SPECIFICATIONS | 2 |
| III. SCREWS USED..... | 2 |
| IV. OPERATION | 3 |
| V. DISASSEMBLING, REASSEMBLING AND LUBRICATING | 4 |
| 1. Case ~ Movement..... | 4 |
| 2. Rear side of the movement (Liquid crystal panel holder screw ~ Coil lead terminal)..... | 5 |
| 3. Front side of the movement (Battery clamp screw - Winding stem)..... | 6 |
| VI. CHECKING AND ADJUSTMENT | 7 |
| 1. Structure of circuit block..... | 7 |
| 2. Relationship between the segments (Liquid crystal panel electrodes) and C-MOS-LSI output terminals | 7 |
| 3. Procedures for checking and adjustment..... | 8 |
| VII. PARTS LIST..... | 11 |


FOREWORD

1. System reset

The Cal. Y960A requires the system reset procedure, because the incorrect display shows on the liquid crystal panel, when the battery is replaced. At that time, perform the system reset as follows.

< System reset procedure >

Contact the battery and system reset pattern with conductive tweezers as shown below. (A label which gives the procedure is attached to the battery clamp.)

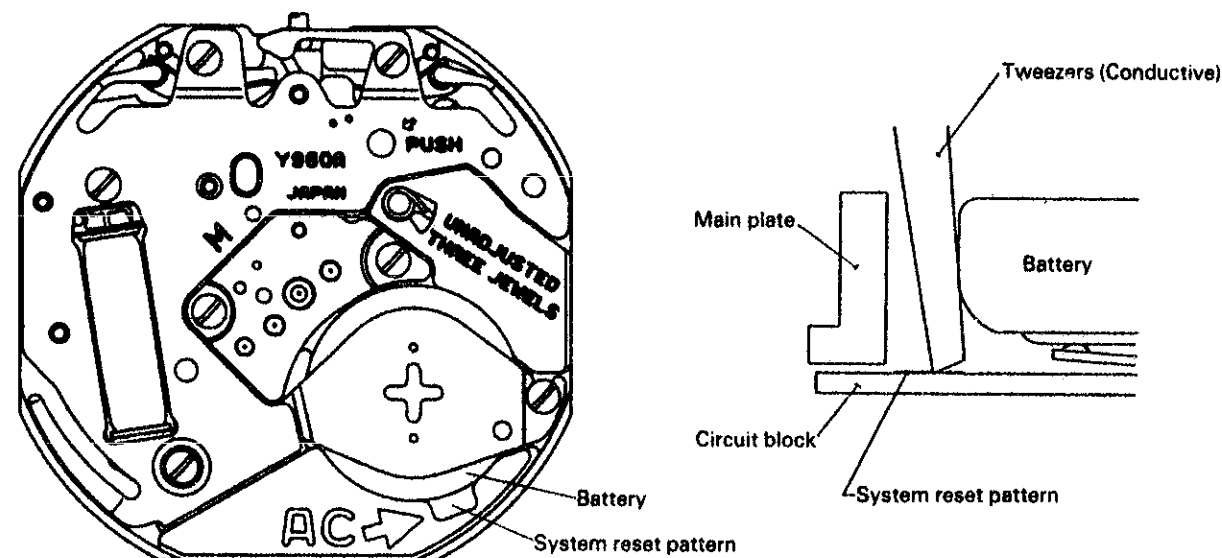


2. Notes on circuit block installation

Three switch pins are soldered to the circuit block to make the contact with the switch lever and yoke. When the circuit block is reassembled, proceed as follows.

- (1) Set the crown at the normal (fully inserted) or second click (fully pulled) position.
- (2) Rotate the crown so that the winding stem cam does not make contact with switch lever (Figure below).

Viewed from the 3 o'clock position

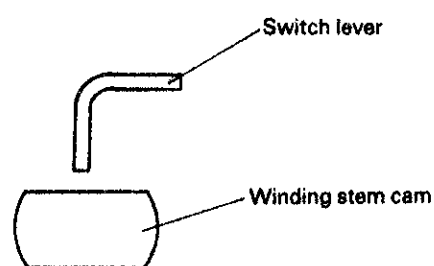

II. SPECIFICATIONS

| Item | Cal. No. | Y960A | |
|----------------------|----------------------------|--|---|
| | | Analogue section | Digital section |
| Display medium | | Three hands | Nematic Liquid Crystal, FEM (Field Effect Mode) |
| Drive system | | Step motor | Multiplex driving |
| Display system | | | Time function Calendar function Alarm time function |
| Additional mechanism | | Second setting device Electric circuit reset switch | Alarm test |
| Loss/gain | | Monthly rate: less than 20 seconds at normal temperature range | |
| Movement size | Maximum diameter | ø26.4 mm (3H - 9H 23.5 mm, 12H - 6H 24.2 mm) | |
| | Casing diameter | ø25.6 mm (3H - 9H 23.5 mm, 12H - 6H 24.2 mm) | |
| | Height (including battery) | 3.55 mm | |
| Regulation system | | None | |
| Measuring gate | | Any gate is available | |
| Battery | | SEIKO TR920W or MAXELL SR920W Voltage: 1.55V Battery life: Approx. 2 years | |
| Jewels | | 3 jewels | |


III. SCREWS USED

In Cal Y960A, two types of screws are used. The head diameter differs from each other as shown in the table below. Note the difference for disassembly and reassembly.




| Parts code | Appearance | Description and number | Difference |
|------------|------------|--|------------|
| 022 247 | | Setting lever spring screw 1 pce. Train wheel bridge screw 2 pcs. Coil block cover screw 4 pcs. Circuit block screw 1 pce. Anti-magnetic shield plate screw 2 pcs. Battery clamp screw 1 pce. | Large head |
| 022 248 | | Liquid crystal panel holder screw 4 pcs. | Small head |

IV. OPERATION

1. When the crown is turned at the normal position, the mode changes as follows.

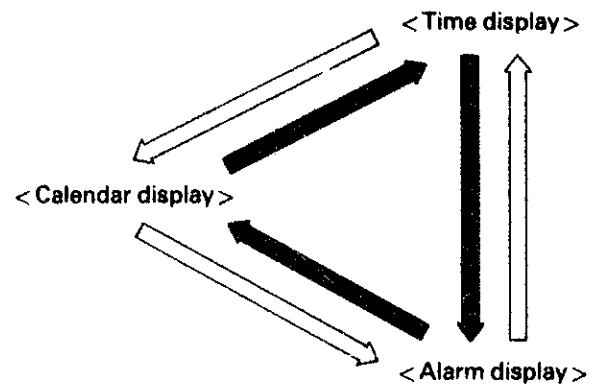

2. Crown at the first click position

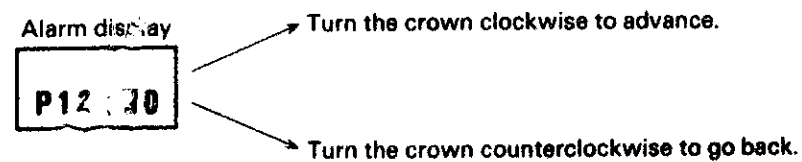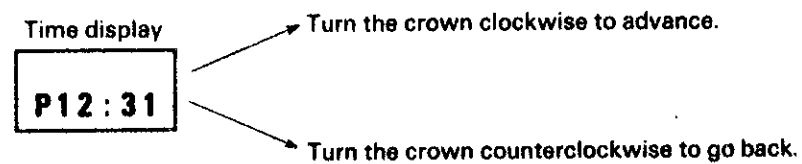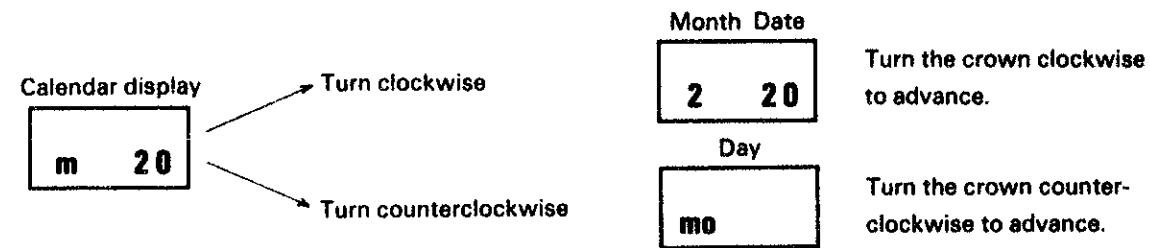

* When the crown is pushed to the normal position in the alarm display, the alarm sounds. The alarm can be turned ON/OFF by inserting the crown immediately after it is pulled. When the alarm time is set, the alarm is set to ON.

3. How to set the analogue time

In the time display, pull out the crown to the second click when the second hand is at 12 o'clock position, and the digital seconds are reset to "00" though not displayed.

Turn the crown clockwise to advance the hands, and counterclockwise to turn them back. Push the crown to the normal position in accordance with a time signal.

All segments are simultaneously displayed, when the crown is turned clockwise or counterclockwise at normal position in the time display and the crown is pulled to the first click position.


V. DISASSEMBLING, REASSEMBLING AND LUBRICATING

1. Case ~ Movement

Lubricating: ● Moebius A

Disassembling procedures: Figs ① ~ ⑤


Reassembling procedures: Figs ⑥ ~ ①

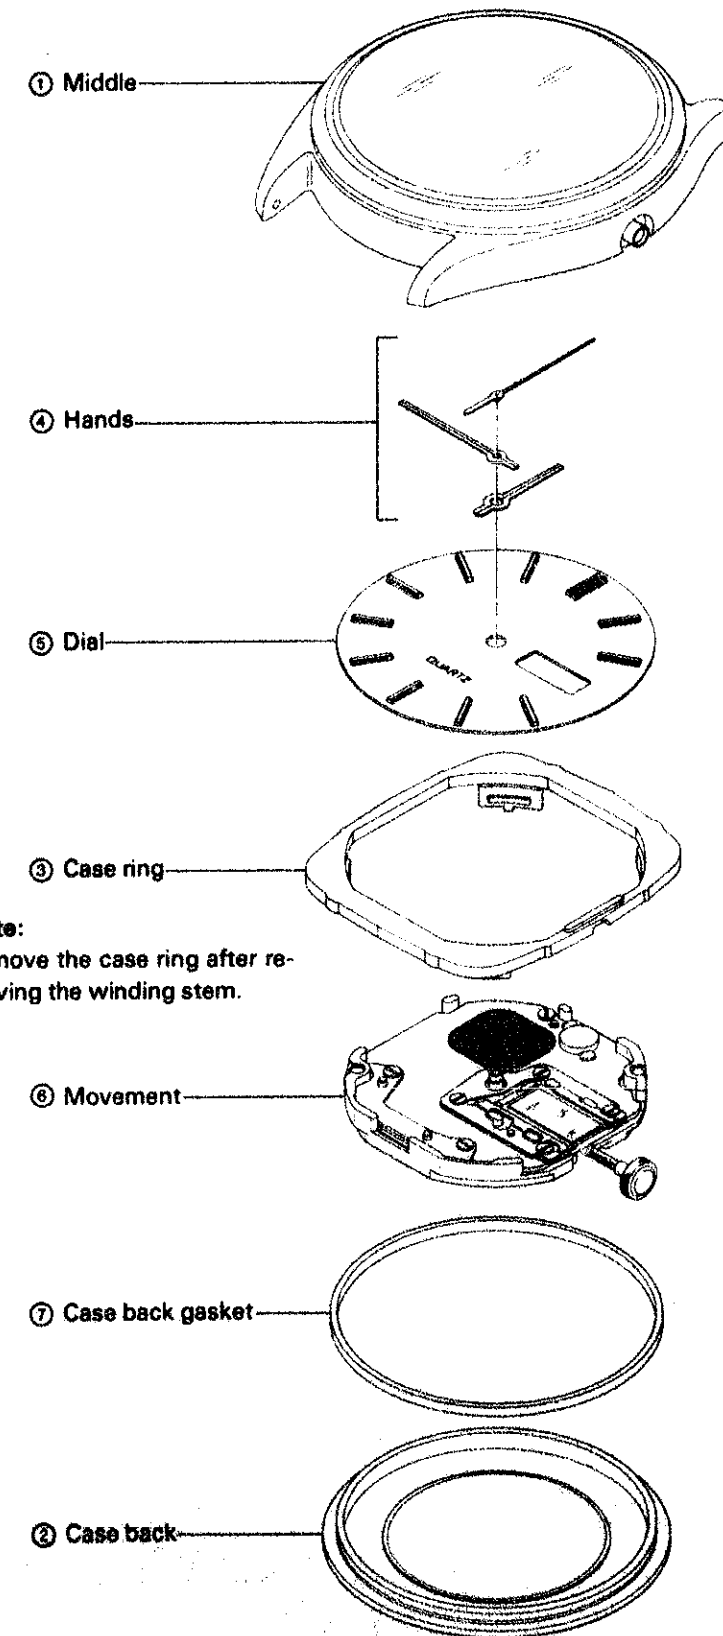

Note:

How to remove the winding stem


Set the crown to the second click position and press the setting lever viewed from the hole shown below to remove the winding stem.

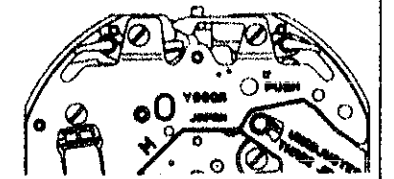

Note:

Remove the case ring after removing the winding stem.

**2. Rear side of the movement
(Liquid crystal panel holder screw ~ Coil lead terminal)**

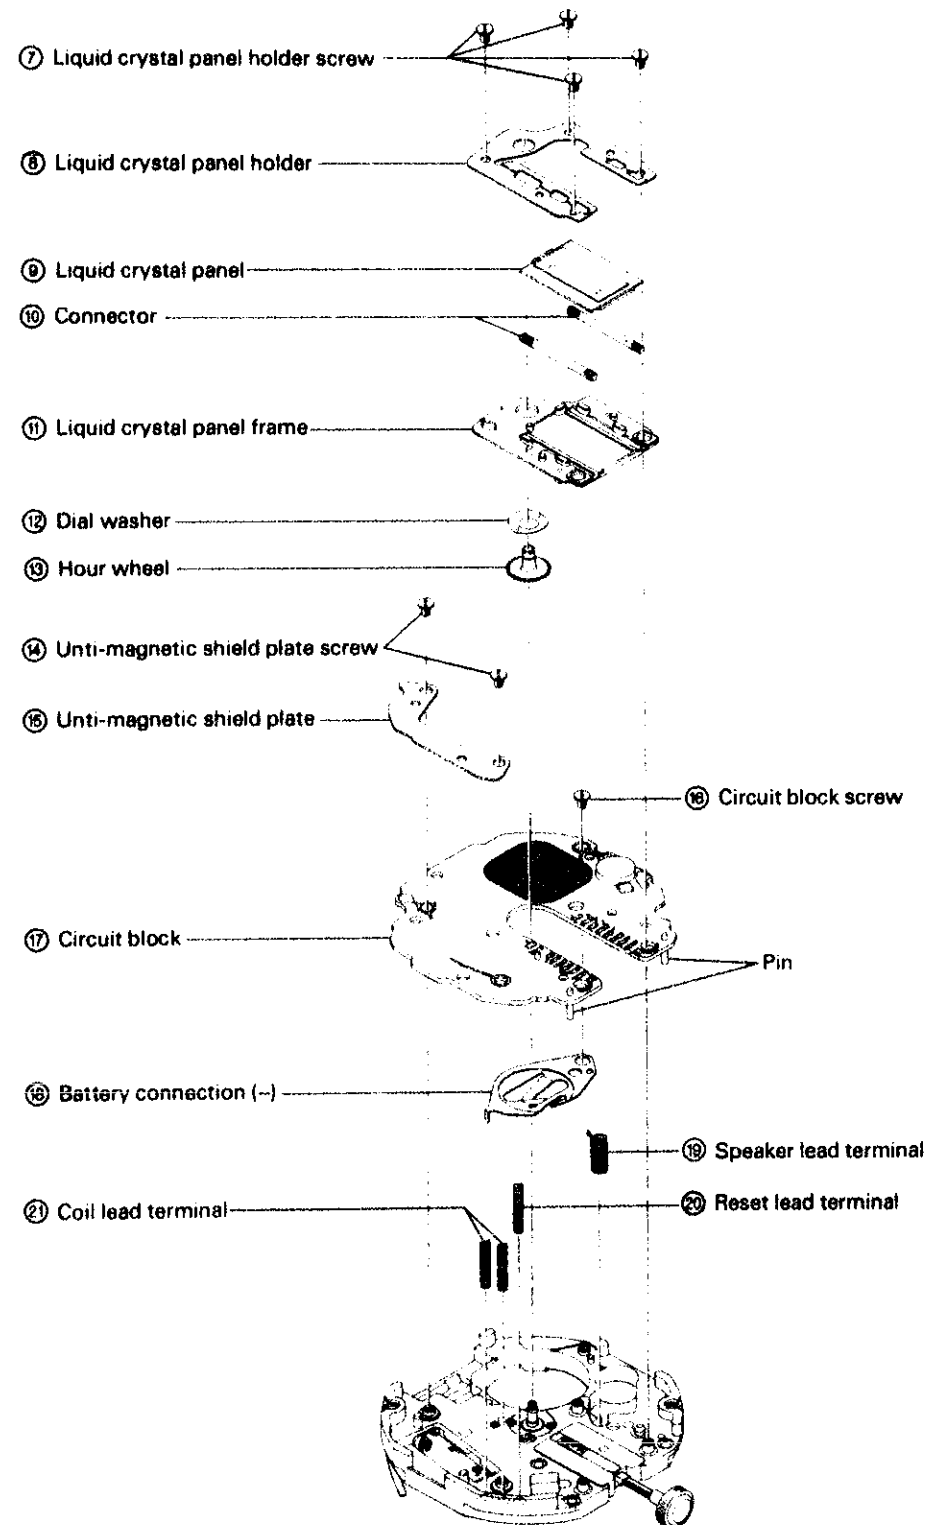


Note:
As the connectors are symmetrical, they can be mounted either position.

Notes on handling the circuit block:
As 3 pins are soldered to the circuit block, take care not to bend or break them.


Note:
The reset lead terminal and coil lead terminal are the common parts and differ from the speaker lead terminal.

**3. Front side of the movement
(Battery clamp screw - winding stem)**

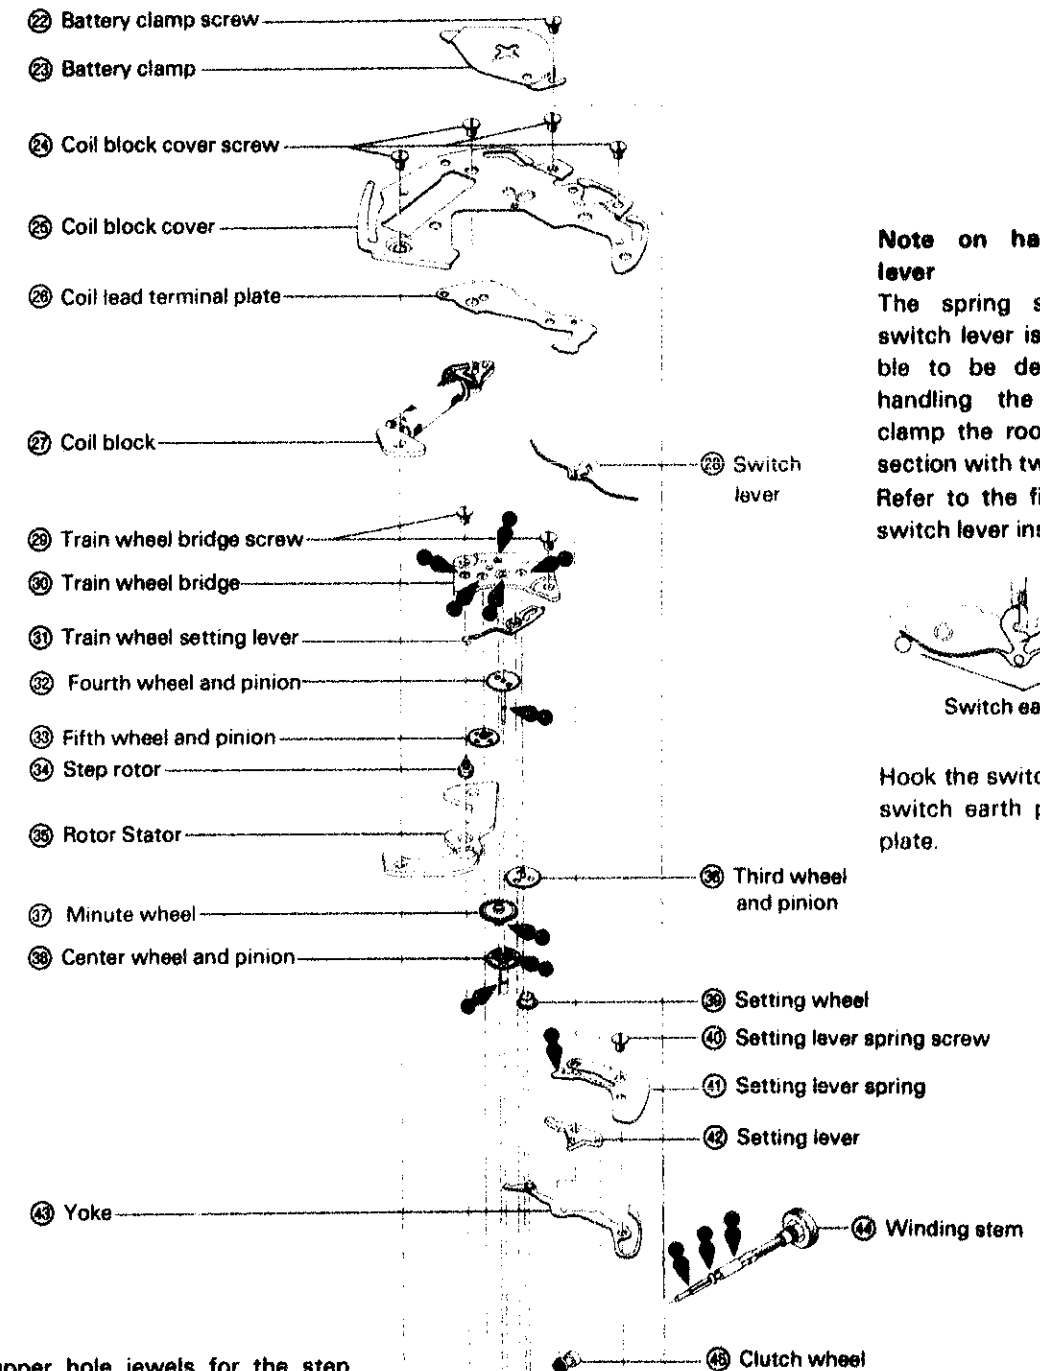

Note on handling switch lever


The spring section of the switch lever is thin and is liable to be deformed. When handling the switch lever, clamp the root of the spring section with tweezers. Refer to the figure below for switch lever installation.

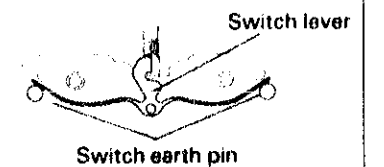


Hook the switch lever with the switch earth pin of the main plate.

Note:

The upper hole jewels for the step rotor, third wheel & pinion and fifth wheel & pinion are reversely installed in order to properly set the wheels and pinions with ease.

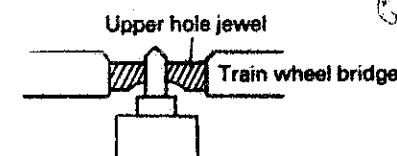

**2. Rear side of the movement
(Liquid crystal panel holder screw ~ Coil lead terminal)**

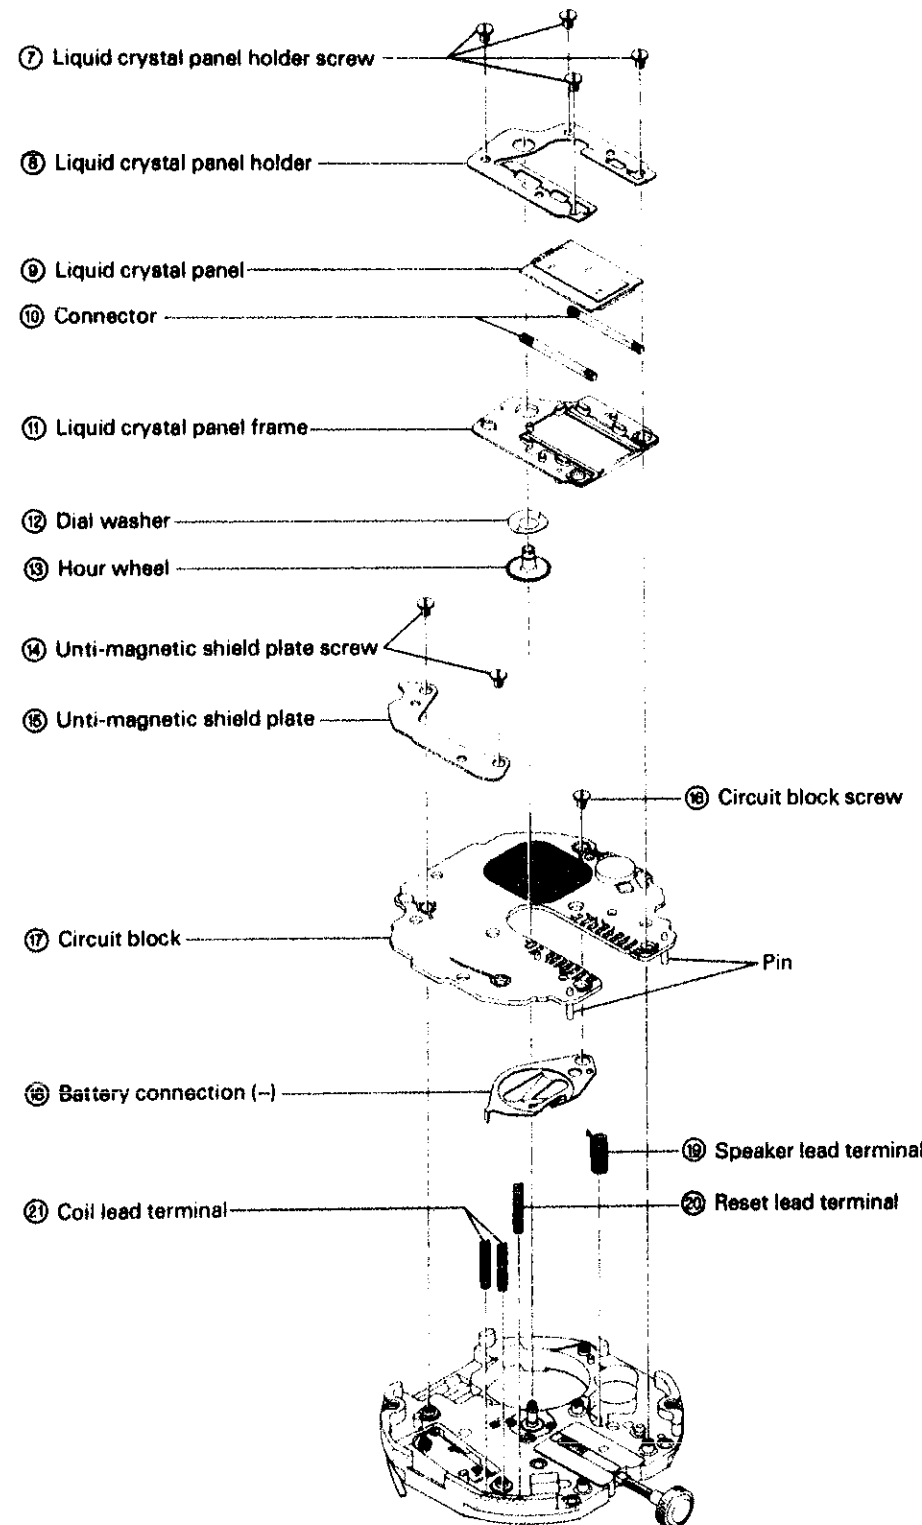


Note:
As the connectors are symmetrical, they can be mounted either position.

Notes on handling the circuit block:
As 3 pins are soldered to the circuit block, take care not to bend or break them.


Note:
The reset lead terminal and coil lead terminal are the common parts and differ from the speaker lead terminal.

**3. Front side of the movement
(Battery clamp screw - winding stem)**

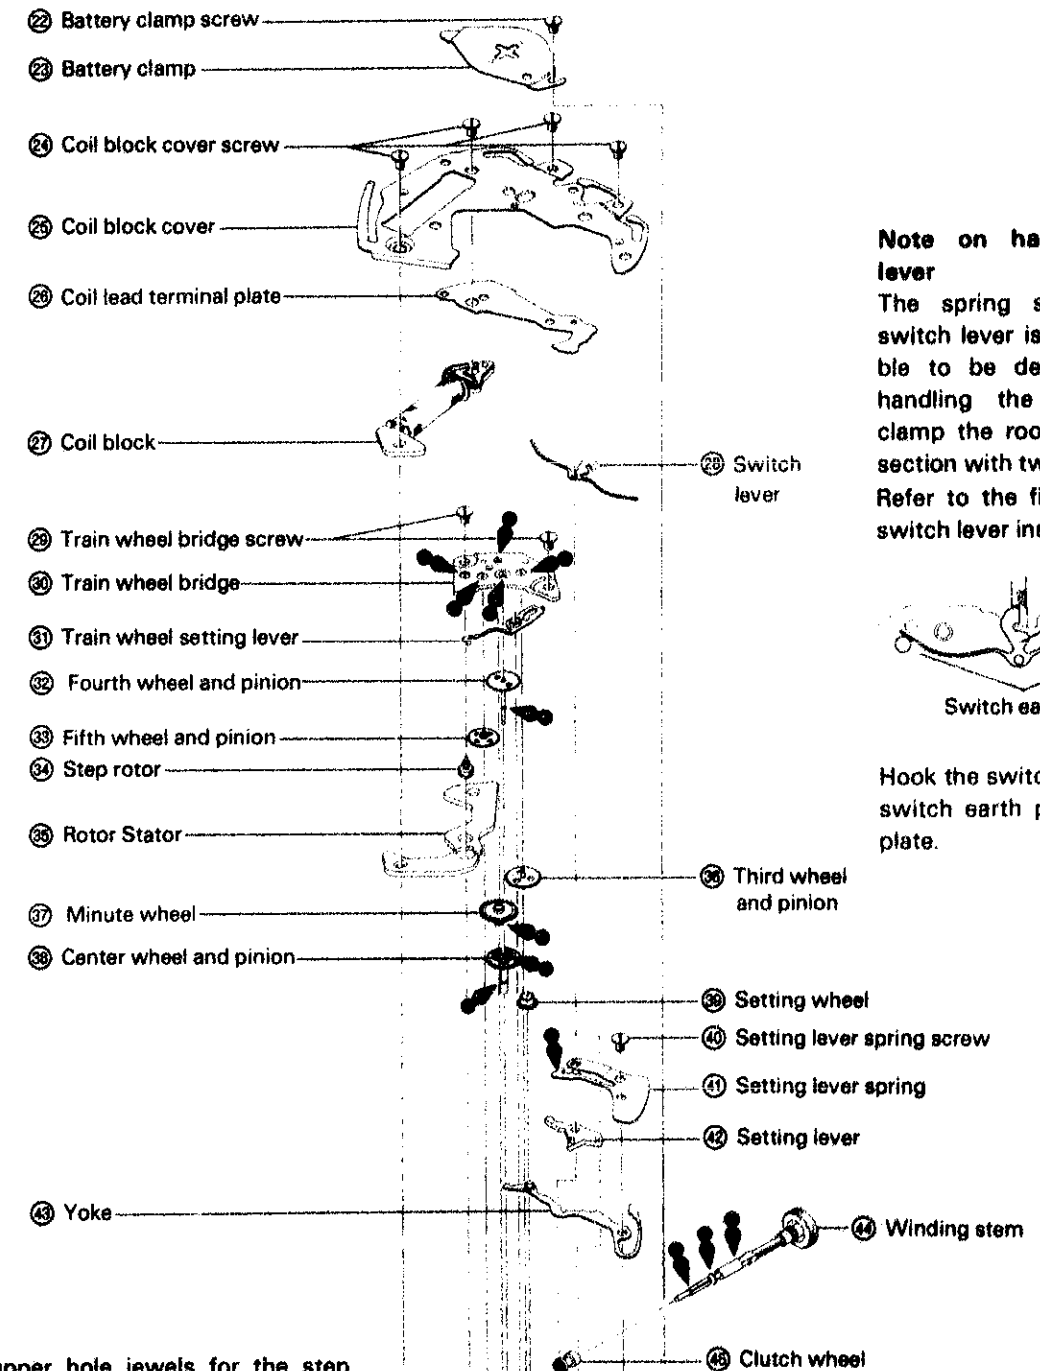


Note on handling switch lever

The spring section of the switch lever is thin and is liable to be deformed. When handling the switch lever, clamp the root of the spring section with tweezers. Refer to the figure below for switch lever installation.

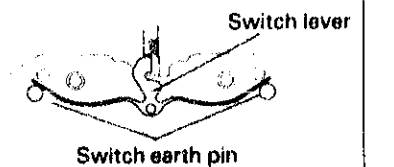


Hook the switch lever with the switch earth pin of the main plate.

Note:
The upper hole jewels for the step rotor, third wheel & pinion and fifth wheel & pinion are reversely installed in order to properly set the wheels and pinions with ease.

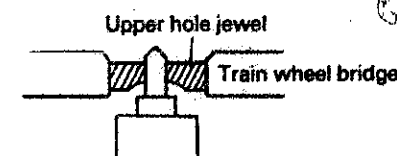


VI. CHECKING AND ADJUSTMENT

1. Structure of circuit block

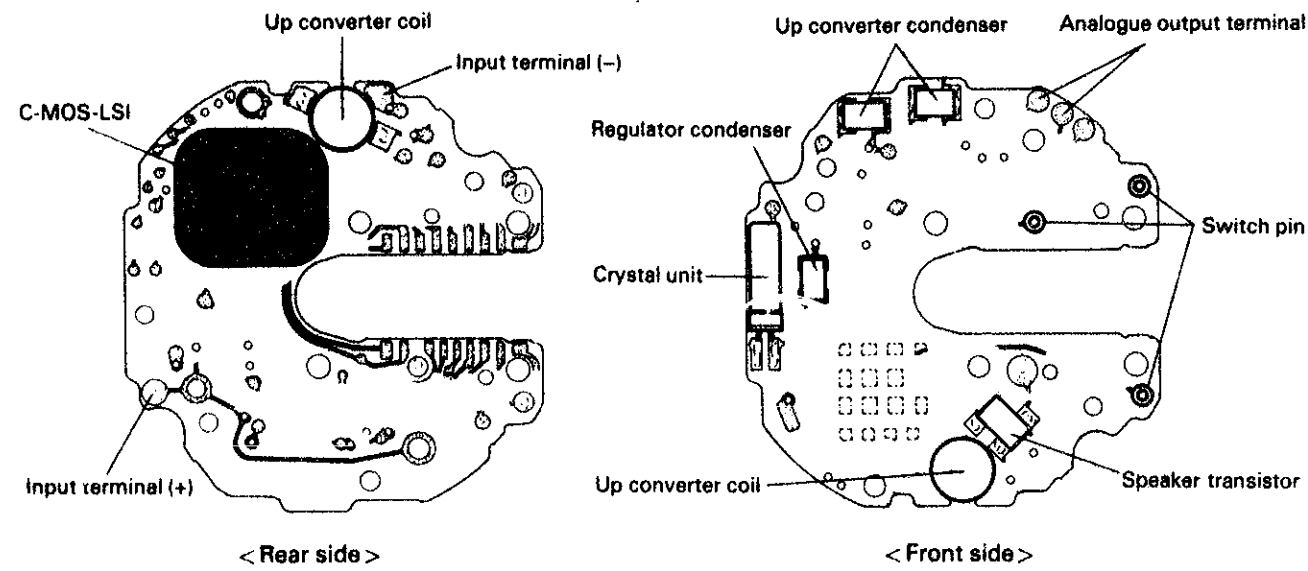



2. Relationship between the segments (Liquid Crystal panel electrodes) and C-MOS-LSI output terminals

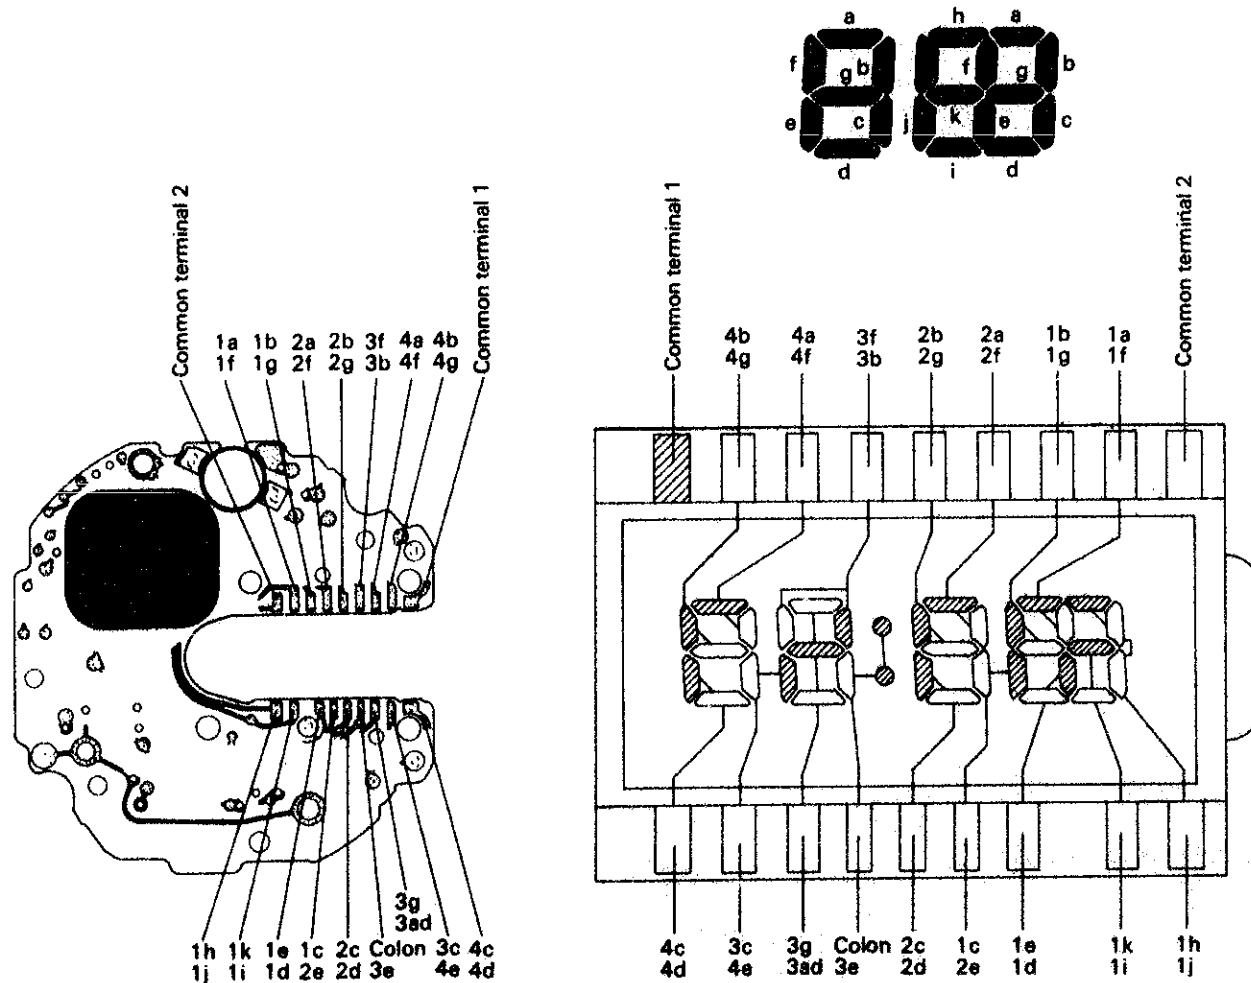

3. Procedures for checking and adjustment

- This section only gives the checking and adjustment procedures exclusive for Y960A.
- For details, refer to "TECHNICAL GUIDE GENERAL INSTRUCTION".

| Procedures | Result and repair |
|--|--|
| <p>OUTPUT SIGNAL</p> <p>Check the output signal of every 1 second with the crown at normal position.</p> | <p>Output signal Normal</p> <p>No output signal Battery voltage check</p> <p>→ Battery voltage is normal Check coil block</p> |
| <p>BATTERY VOLTAGE</p> <p>Use the Digital Multi Tester S-840A.</p> <p>Range to be used: DC V</p> | <p>1.5V or more Normal</p> <p>Less than 1.5V Replace the battery.</p> |
| <p>BATTERY CONDUCTIVITY</p> <p>Check the conductivity between the battery and battery connection (-).</p> | |
| <p>CIRCUIT BLOCK CONDUCTIVITY</p> <p>Check the circuit block output terminal and pattern for contermination, break and short circuit.</p> | |
| <p>GEAR TRAIN MECHANISM</p> <p>Check the train wheel bridge for play of rotor and wheels and pinions, dust, lint, and lubrication.</p> | |
| <p>RESET CONDITION</p> <p>Reassemble the movement and check the reset condition with a quartz tester.</p> <p>(1) Check the output signal with the crown at normal position.</p> <p>(2) Check the output signal with the crown at second click position.</p> | <p>Output signal Normal</p> <p>No output signal Defective</p> <p>Proceed to (2)</p> <p>No output signal Normal</p> <p>Output signal Defective</p> <p>Replace the coil lead terminal plate.</p> |
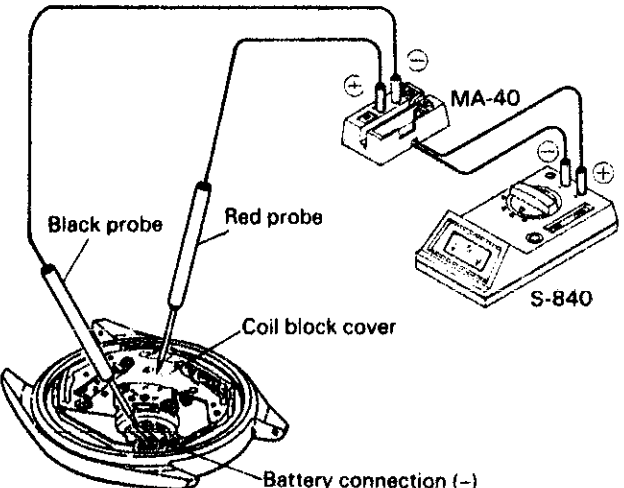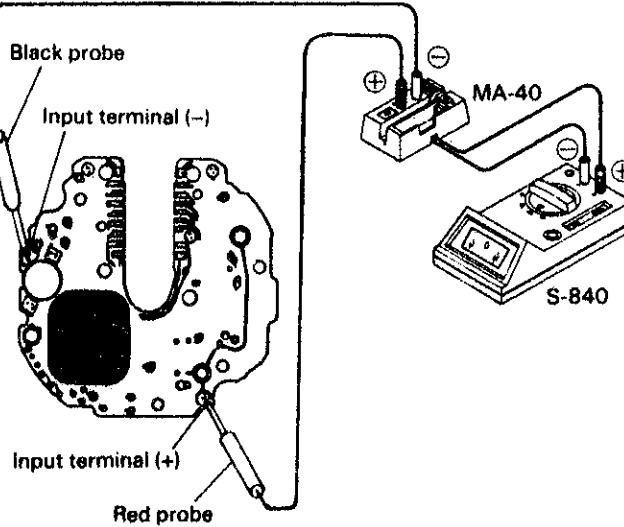
| Procedures | Result and repair |
|---|--|
| <p>CURRENT CONSUMPTION</p> <p>(1) Check the current consumption of the module. ● Use the Digital Multi Tester S-840 and Multi Adaptor MA-40.</p>  <p>(2) Check the current consumption of the circuit block. ● Check in the same manner as in (1).</p>  | <p>2.3μA or less Normal More than 2.3μA Defective Check the current consumption of the circuit block.</p> |
| <p>ACCURACY</p> <ul style="list-style-type: none"> ● Check with quartz tester and electromagnetic microphone. <p>< Measuring ></p> <ul style="list-style-type: none"> ● Check with the crown at normal position. ● Set the digital section to the day or time display mode. <p>NOTE: The accuracy can be checked with the digital section. However, the display is small and it is difficult to check the movement. Check the accuracy with the analogue section.</p> | <p>1.1μA or less Normal If the coil block is not short circuited, replace the liquid crystal panel. More than 1.1μA Defective</p> <p>Monthly rate Less than 20 seconds Normal More than 20 seconds Defective</p> |

| Procedures | Result and repair |
|---|--|
| <p>CONDUCTIVITY BETWEEN C-MOS-LSI AND LIQUID CRYSTAL PANEL</p> <p>Check the liquid crystal panel electrode, connector and lead terminals for contamination and dust. There should be no defect, scratches and damage.</p> <p>LIQUID CRYSTAL PANEL AND CIRCUIT BLOCK</p> <p>Referring to the "Relationship between the segments (Liquid crystal panel electrodes) and C-MOS-LSI output terminals, check the liquid crystal panel and circuit block.</p> <p>(1) Check to see if the corresponding segment of the liquid crystal panel is displayed.</p> <p>(2) Check the circuit block output.</p> | <p>Display Normal Not display Defective Replace the liquid crystal panel.</p> <p>0.8V or more Normal Less than 0.8V Defective Replace the circuit block.</p> |
| <p>ALARM FUNCTION</p> <p>(1) Check the contacts of piezo electric element and speaker lead terminal for contamination and the speaker lead terminal for deformation.</p> <p>(2) Measure the up converter coil resistance of the circuit block and check for the broken wire and short circuit. Use the Digital Multi Tester S-840A.</p> | <p>50 ~ 90Ω Normal Less than 50Ω Defective (short circuit) More than 90Ω Defective (broken wire) Replace the circuit block.</p> |
| <p>COIL BLOCK</p> <p>Use the Digital Multi Tester S-840A. Range to be used: Ω</p> | <p>2.3 ~ 2.8kΩ Normal More than 2.8kΩ Defective (broken wire) Less than 2.3kΩ Defective (short circuit) Replace the coil block.</p> |
| <p>FUNCTION</p> <p>Check the operation referring to the "Operation.", P. 3.</p> | |

VII. PARTS LIST

| Cal. Y960 A | | | |
|--------------------|---------------------------|---------------|-----------------------------------|
| PARTS NO. | PART NAME | PARTS NO. | PARTS NAME |
| 125 755 | Train wheel bridge | 4259 745 | Anti-magnetic shield plate |
| * 221 755 | Center wheel & pinion | 4270 745 | Battery connection (-) |
| 231 755 | Third wheel & pinion | 4311 745 | Coil lead terminal plate |
| * 241 765 | Fourth wheel & pinion | 4313 745 | Connector |
| 261 795 | Minute wheel | 4450 745 | Switch lever |
| * 271 765 | Hour wheel | 4462 961 | Coil block cover |
| 281 755 | Setting wheel | * 4510 811 | Liquid crystal panel (Silver) |
| 282 795 | Clutch wheel | * 4510 812 | Liquid crystal panel (Gold) |
| 354 795 | Winding stem | 4512 745 | Liquid crystal panel frame |
| 383 755 | Setting lever | 4540 745 | Liquid crystal panel holder |
| 384 795 | Yoke | 011 325 | Upper hole jewel for fourth wheel |
| 388 795 | Setting lever spring | 011 547 | Lower hole jewel for step rotor |
| 391 755 | Train wheel setting lever | 011 568 | Upper hole jewel for step rotor |
| 491 725 | Dial washer | 022 247 | Setting lever spring screw |
| 701 755 | Fifth wheel & pinion | 022 247 | Train wheel bridge screw |
| 4001 745 | Circuit block | 022 247 | Coil block cover screw |
| 4002 755 | Coil block | 022 247 | Circuit block screw |
| 4146 755 | Step rotor | 022 247 | Anti-magnetic shield plate screw |
| 4225 746 | Battery clamp | 022 247 | Liquid crystal panel holder screw |
| 4239 755 | Rotor stator | 022 247 | Battery clamp screw |
| 4246 745 | Coil lead terminal | SEIKO TR920W | } Battery |
| 4246 745 | Reset lead terminal | MAXELL SR920W | |
| 4246 746 | Speaker lead terminal | | |

Remarks:

* Center wheel & pinion, Fourth wheel & pinion, Hour wheel

There are two different types as specified below:

Combination:

| Type | Center wheel & pinion | Fourth wheel & pinion | Hour wheel |
|------|-----------------------|-----------------------|------------|
| a | 221 755 | 241 765 | 271 765 |
| b | 221 795 | 241 795 | 271 795 |

* Liquid crystal panel

4510 811 (Silver)

4510 812 (Gold)

The type of liquid crystal panel is determined based on the design of case.