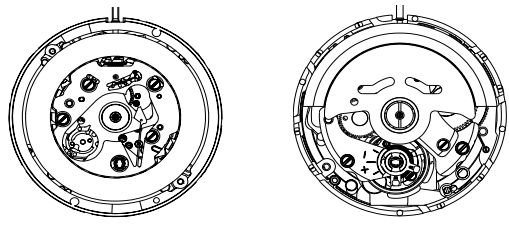



**TECHNICAL GUIDE
&
PARTS CATALOGUE**

**Cal.NH3 Series
(NH34A/35A/36A/37A/38A/39A)**


AUTOMATIC MECHANICAL

Item	Cal. No.	NH35A						
Movement		 <p style="text-align: center;">*Refer to page 2 for other Cal. No. specifications.</p>						
Movement size	Outside diameter	Φ27.40 mm						
	Casing diameter	Φ29.36 mm (with dial holding spacer)						
	Total height	5.32 mm						
Cal. No.		NH34A	NH35A	NH36A	NH37A	NH38A	NH39A	
Time indication	3 Hands (hour, minute, second)	○	○	○	○	○	○	
	Date calendar	○	○	○	○	-	-	
	Day calendar	-	-	○	-	-	-	
	24 hour hand	○	-	-	○	-	○	
Basic function	Manual winding	○	○	○	○	○	○	
	Automatic winding with ball bearing	○	○	○	○	○	○	
	Stop-second device	○	○	○	○	○	○	
	Quick date correction	○	○	-	○	-	-	
	Quick day-date correction	-	-	○	-	-	-	
	Second time zone setting	○	-	-	-	-	-	
Frequency		21,600 vibrations per hour						
Accuracy	Static accuracy	- 20 ~ + 40 seconds per day * Measurement should be done within 10 ~ 60 minutes after fully wound up. * All measurements are made without the calendar in function.						
	Measurement position	Direction of 3 positions. (1) Dial up (2) 9 o'clock up (3) 6 o'clock up						
	Lift angle	53 deg.						
	Measurement time	20 seconds * Equipment to be used : Witschi WATCH EXPERT						
	Posture difference	Difference is under 60 seconds within maximum value and minimum value. * Measurement should be done within 10 ~ 60 minutes after fully wound up. * Direction of 4 positions. (1) 12 o'clock up (2) 9 o'clock up (3) 6 o'clock up (4) 3 o'clock up						
	Isochronisms (24h-0h)	- 20 ~ + 40 seconds per day. * Direction of position : Dial up * Difference of static accuracy of 24 h and 0 h						
Duration time		More than 41 hours (Mainspring after fully wound up) * Posture to confirmation : Dial up						
Winding the mainspring		<< Movements >> •Fully wound up by turning the crown minimum 55 times. •Fully wound up by turning the ratchet wheel screw 8 times. << Complete Watch >> A winding machine is needed to wind up the mainspring. * Full wind up conditions (Reference information) (1) Rotary speed : 30 rpm (2) Operating time : 60 minutes						
Crown position	Normal position	Counterclockwise	Free	Free	Free	Free	Free	Free
		Clockwise	Manual winding	Manual winding	Manual winding	Manual winding	Manual winding	Manual winding
	First click	Counterclockwise	Date setting	Date setting	Date setting	Date setting	Time setting	Time setting
		Clockwise	Second time zone setting	Free	Day setting	Free		
	Second click	Time setting	Time setting	Time setting	Time setting	-	-	


NH34A

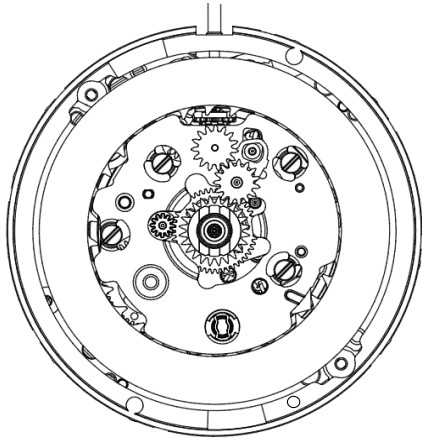


NH35A

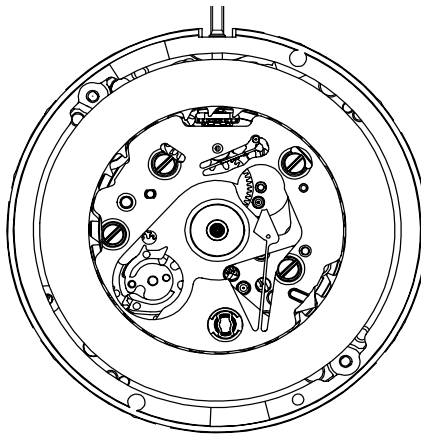


NH36A

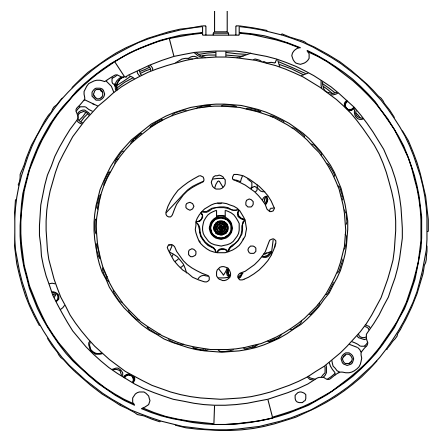


NH37A

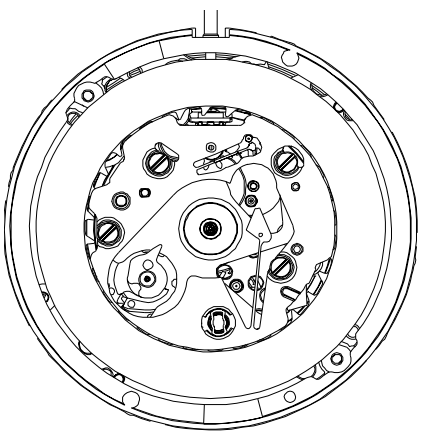

NH38A

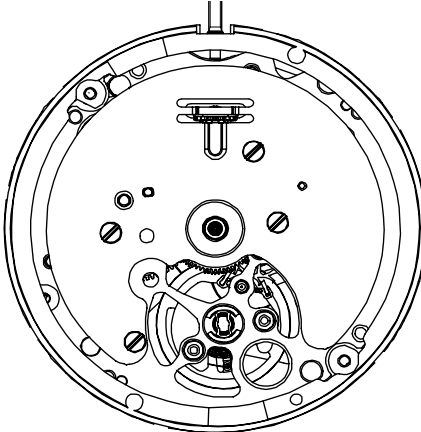

NH39A

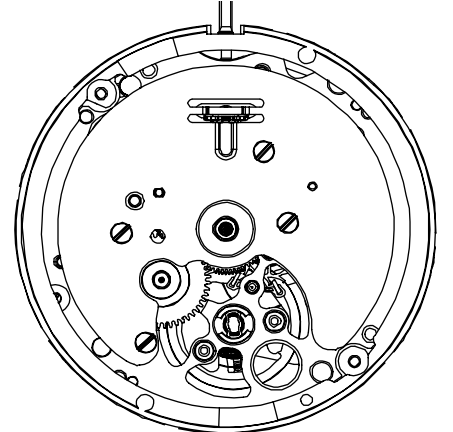

Disassembling procedures Figs.

① → ⑤⑧

Reassembling procedures Figs.

⑤⑧ → ①

Type of oil

Moebius 9010

A9a (S-4)

A9a (S-6)

Oil quantity mark

Normal quantity

Sufficient quantity

<<NH34A>>

② 0012 354

Date indicator maintaining plate screw

④ 0278 333

24 hour wheel

*1
24 hour wheel (back side)

① 0491 333

Dial Washer

② 0012 354



Date indicator maintaining plate screw




③ 0808 334

Date indicator maintaining plate with time difference setting lever

*2

setting direction

OK	NG
	

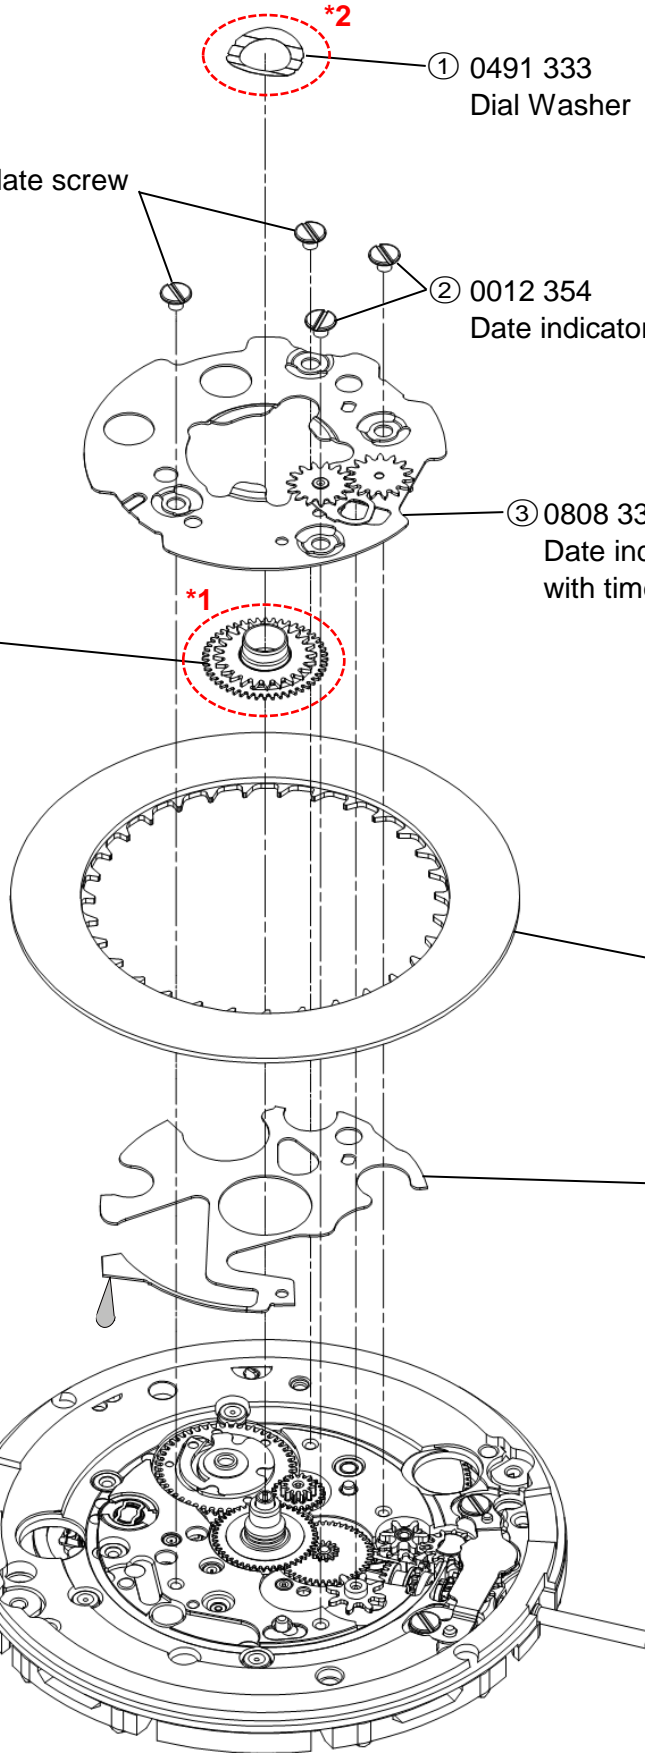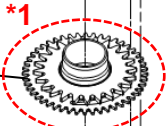

*Refer to page 11 for each parts code

Disassembling procedures Figs.


① → ⑤⑧


Reassembling procedures Figs.

⑤⑧ → ①


Type of oil


 Moebius 9010

 A9a (S-4)


 A9a (S-6)

Oil quantity mark

 Normal quantity

 Sufficient quantity

<<NH34A>>

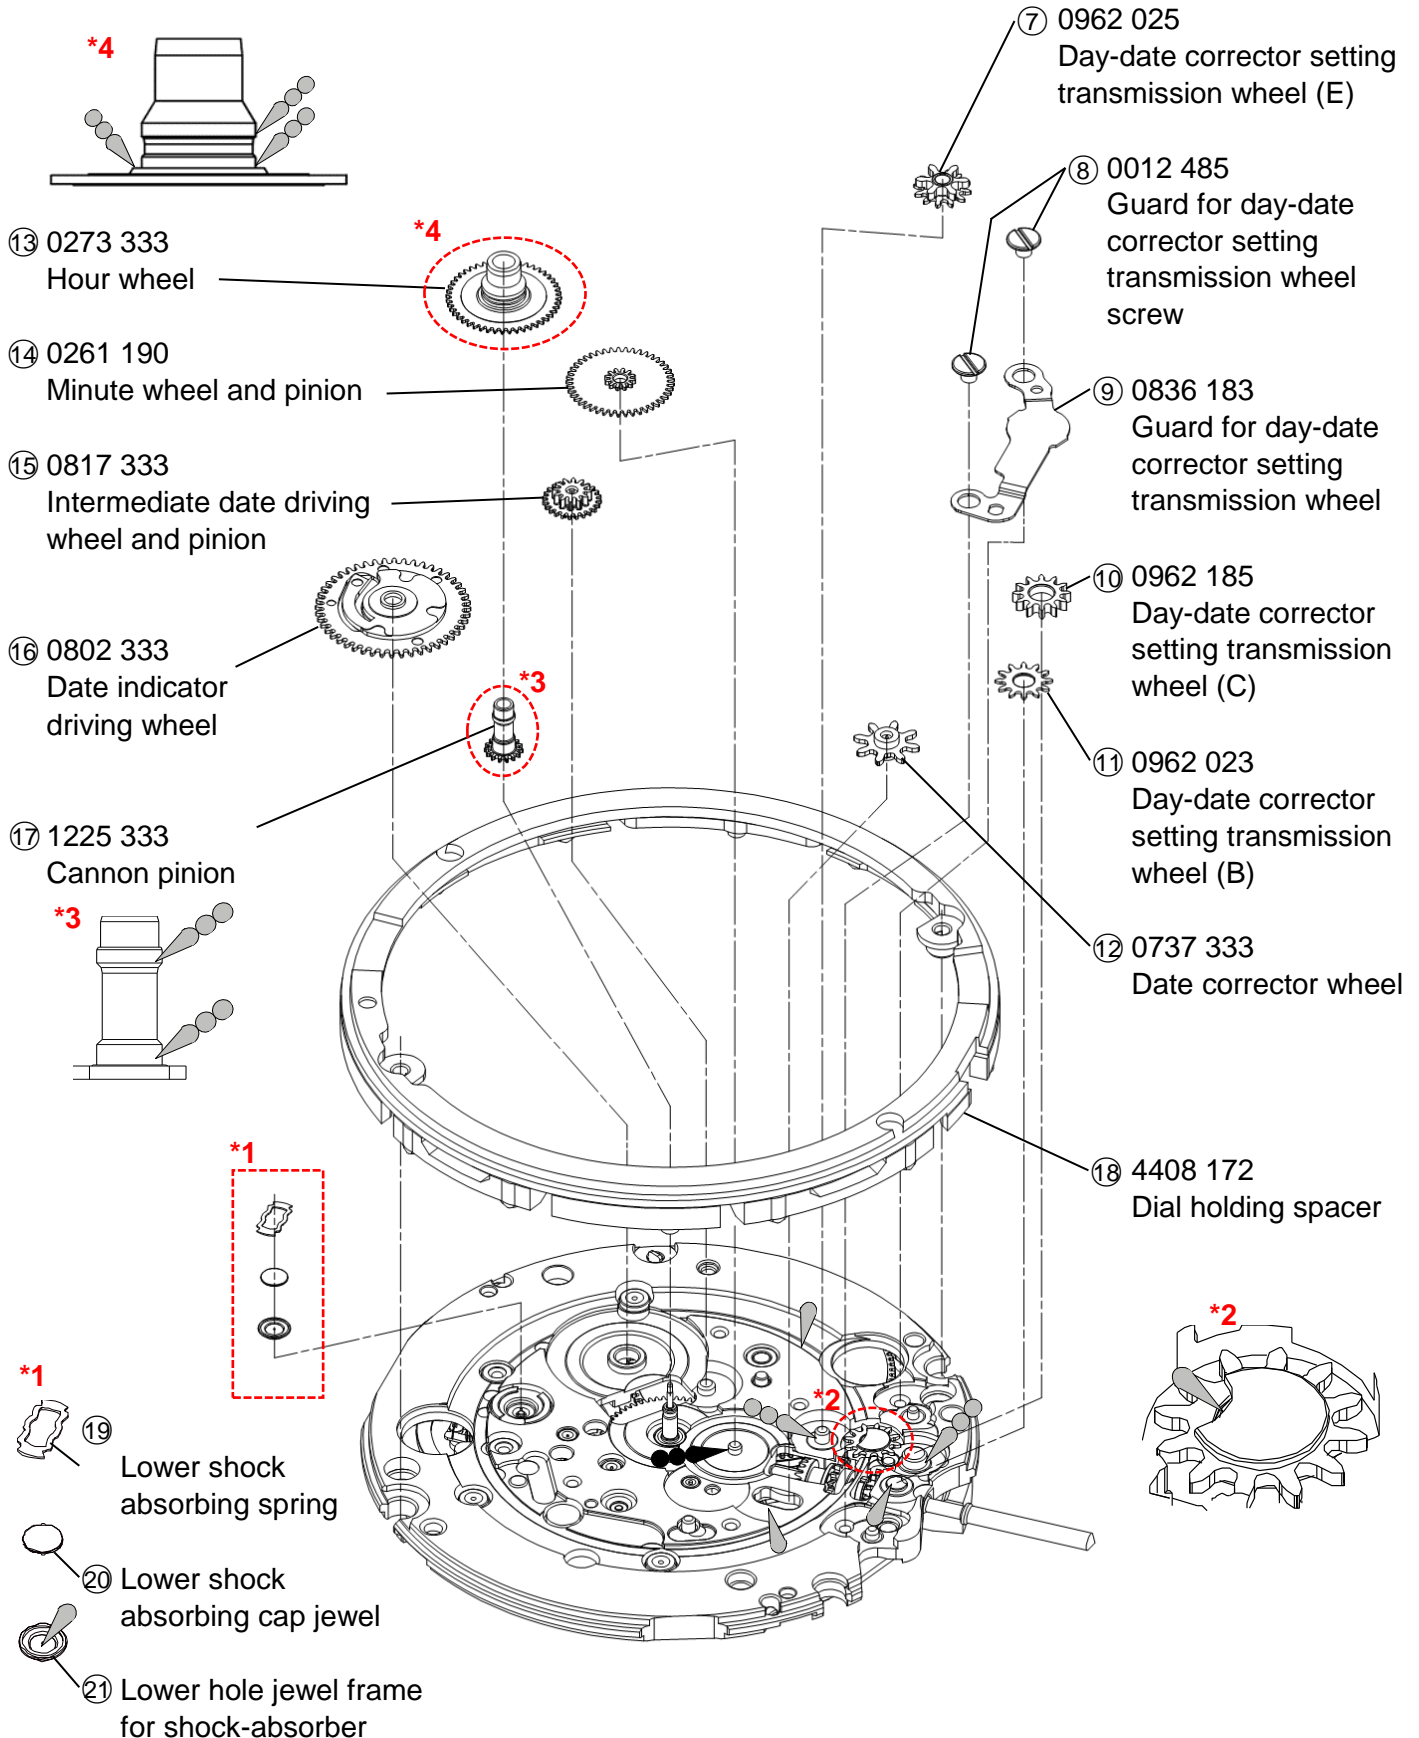

Disassembling procedures Figs.

① → ⑤⑧

Reassembling procedures Figs.

⑤⑧ → ①

Type of oil

Moebius 9010

A9a (S-4)


A9a (S-6)

Oil quantity mark

Normal quantity

Sufficient quantity

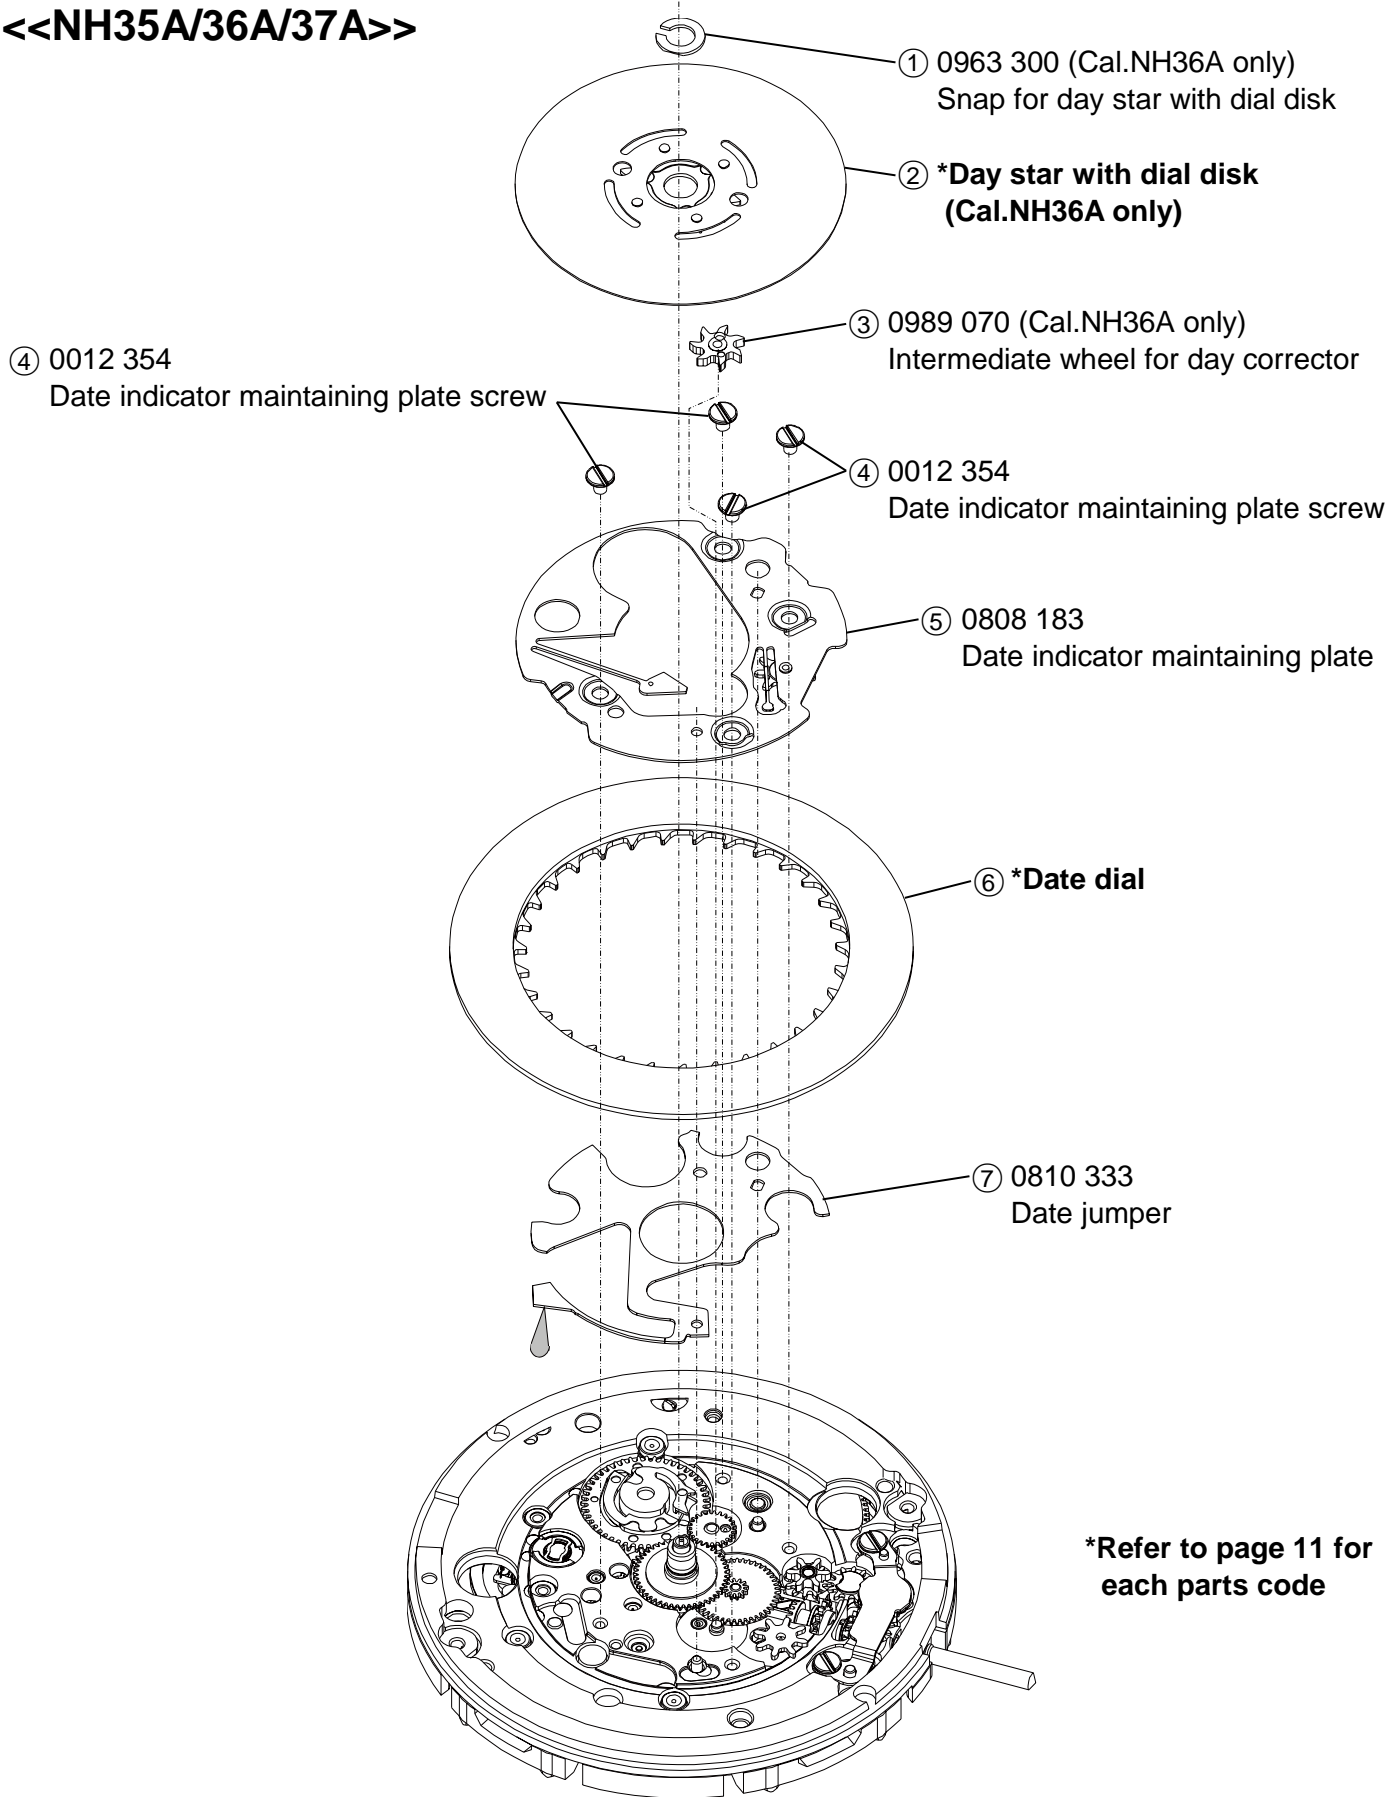

<<NH35A/36A/37A>>




***Refer to page 11 for each parts code**


Disassembling procedures Figs.
① → ⑤⑧
Reassembling procedures Figs.
⑤⑧ → ①


Type of oil

-  Moebius 9010
-  A9a (S-4)


-  A9a (S-6)

Oil quantity mark

-  Normal quantity

-  Sufficient quantity

<<NH35A/36A/37A>>

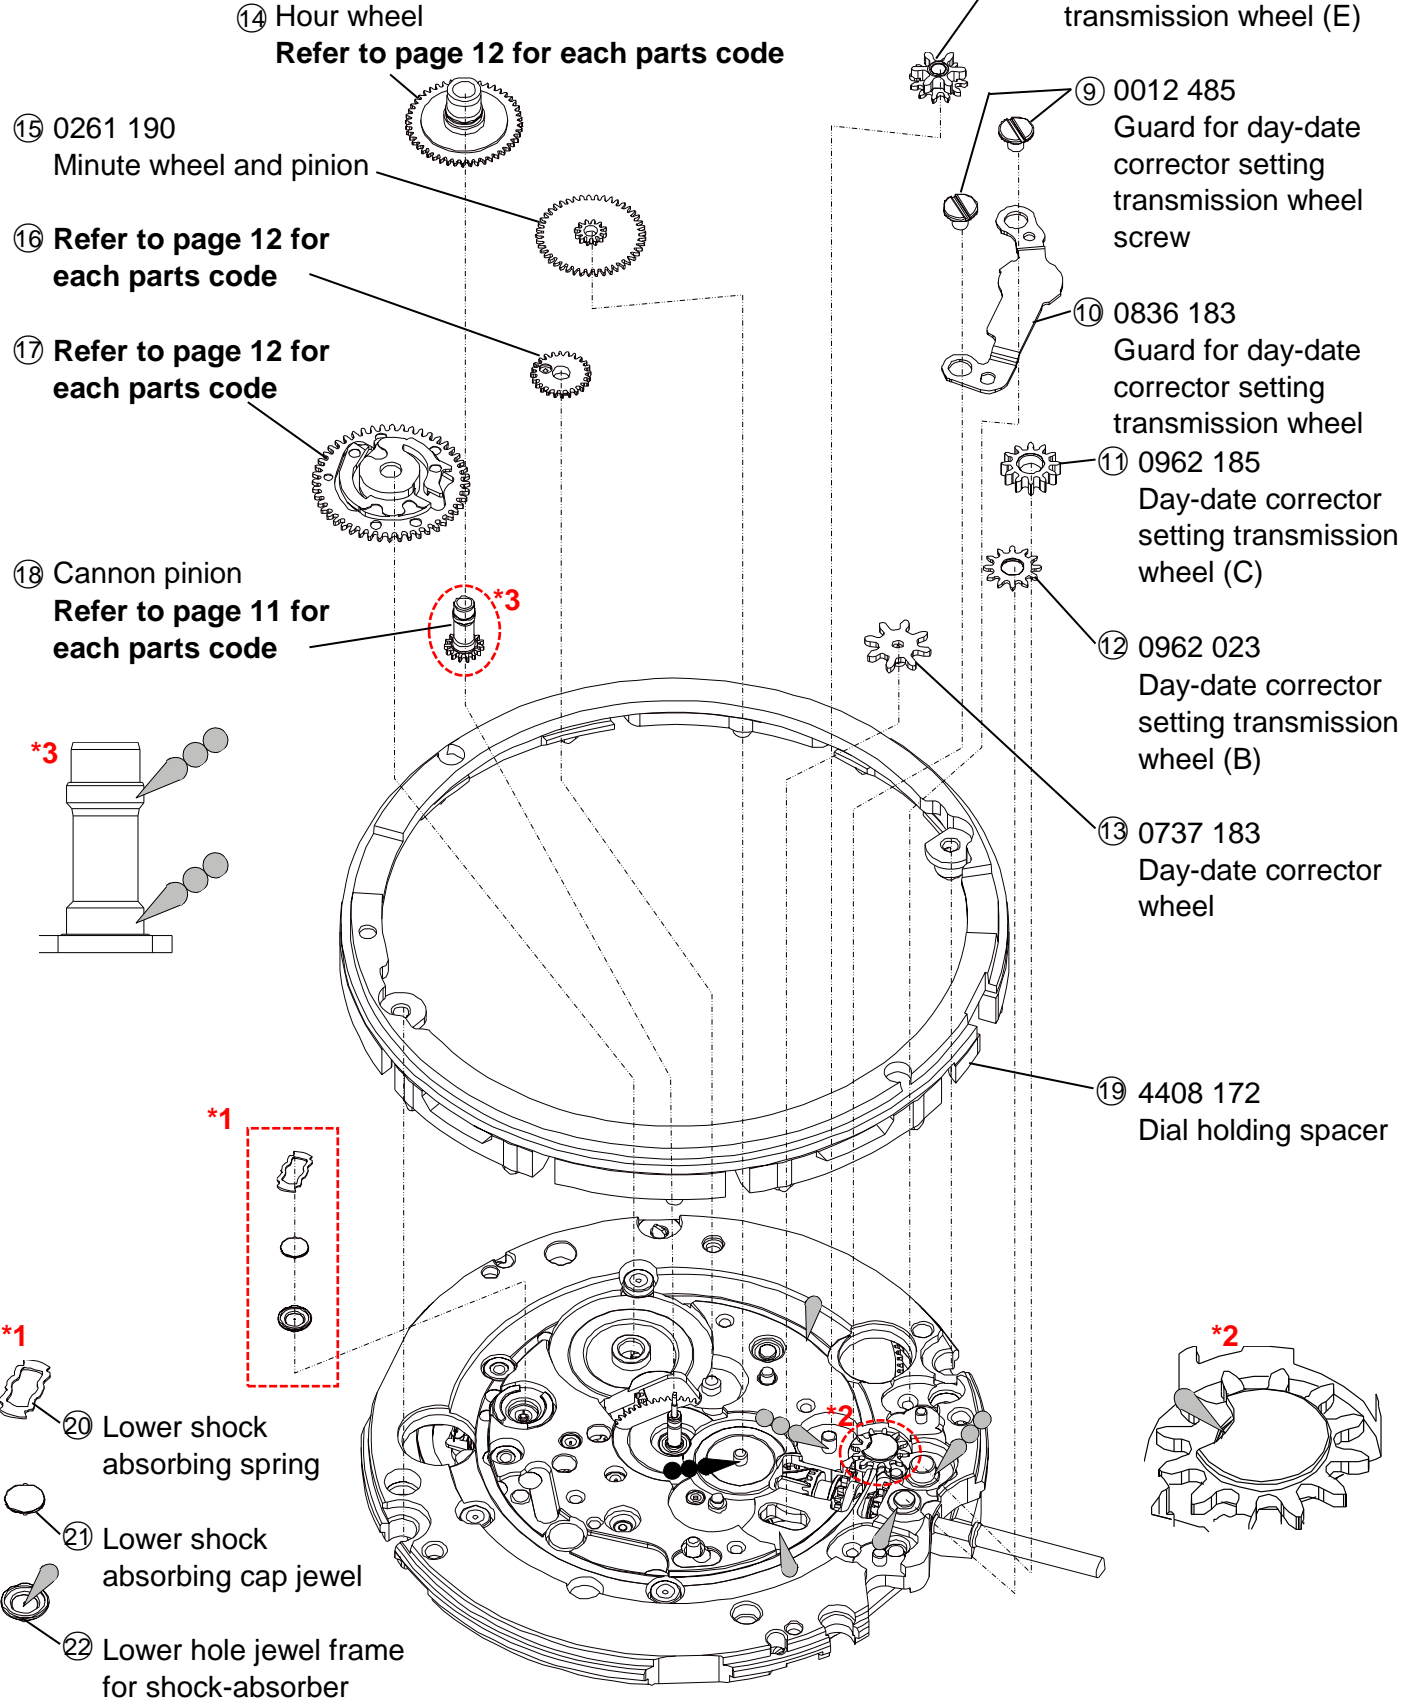

Disassembling procedures Figs.


① → ⑤⑧


Reassembling procedures Figs.

⑤⑧ → ①


Type of oil


 Moebius 9010

 A9a (S-4)

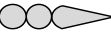 A9a (S-6)

Oil quantity mark

 Normal quantity

 Sufficient quantity

<<NH38A/39A>>

① 0012 354
Hour wheel guard screw

② 0376 184
Hour wheel guard

③ Hour wheel
Refer to page 12 for
each parts code


④ 0261 190
Minute wheel and pinion

⑤ 0817 300 (Cal.NH39A only)
Intermediate 24hour wheel
and pinion

⑦ Cannon pinion
Refer to page 11 for
each parts code


⑧ 4408 172
Dial holding spacer

⑥ 0157 184 (Cal.NH39A only)
24hour wheel

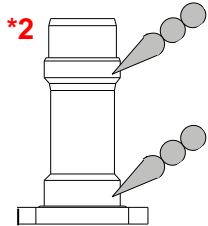

*2

*1



*1

⑨ Lower shock
absorbing spring

⑩ Lower shock
absorbing cap jewel

⑪ Lower hole jewel frame
for shock-absorber

Disassembling procedures Figs.

① → ⑤⑧


Reassembling procedures Figs.

⑤⑧ → ①

Type of oil

 Moebius 9010

 A9a (S-4)

 A9a (S-6)

Oil quantity mark

 Normal quantity

 Sufficient quantity


②③ Oscillating weight with ball bearing
Refer to page 11 for each parts code

②⑨ 0012 100
Balance bridge screw

③⑩ 0171 353
Balance cock

*1

*2



②④ 0012 354
Automatic train bridge screw

②⑤ 0191 183
Automatic train bridge

②⑥ 0514 183
Second reduction wheel and pinion

whole tooth

②⑦ 0012 919
Ratchet wheel screw


②⑧ 0285 051
Ratchet wheel

③① 0012 354
Pallet bridge screw

③② 0161 300
Pallet bridge

③③ 0301 383
Pallet fork

*3

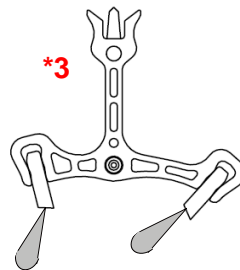


③⑩-1
Balance complete with stud
Refer to page 11 for each parts code

*1

③⑩-2
Lower shock absorbing spring

③⑩-3
Lower shock absorbing cap jewel

③⑩-4
Lower hole jewel frame for shock-absorber

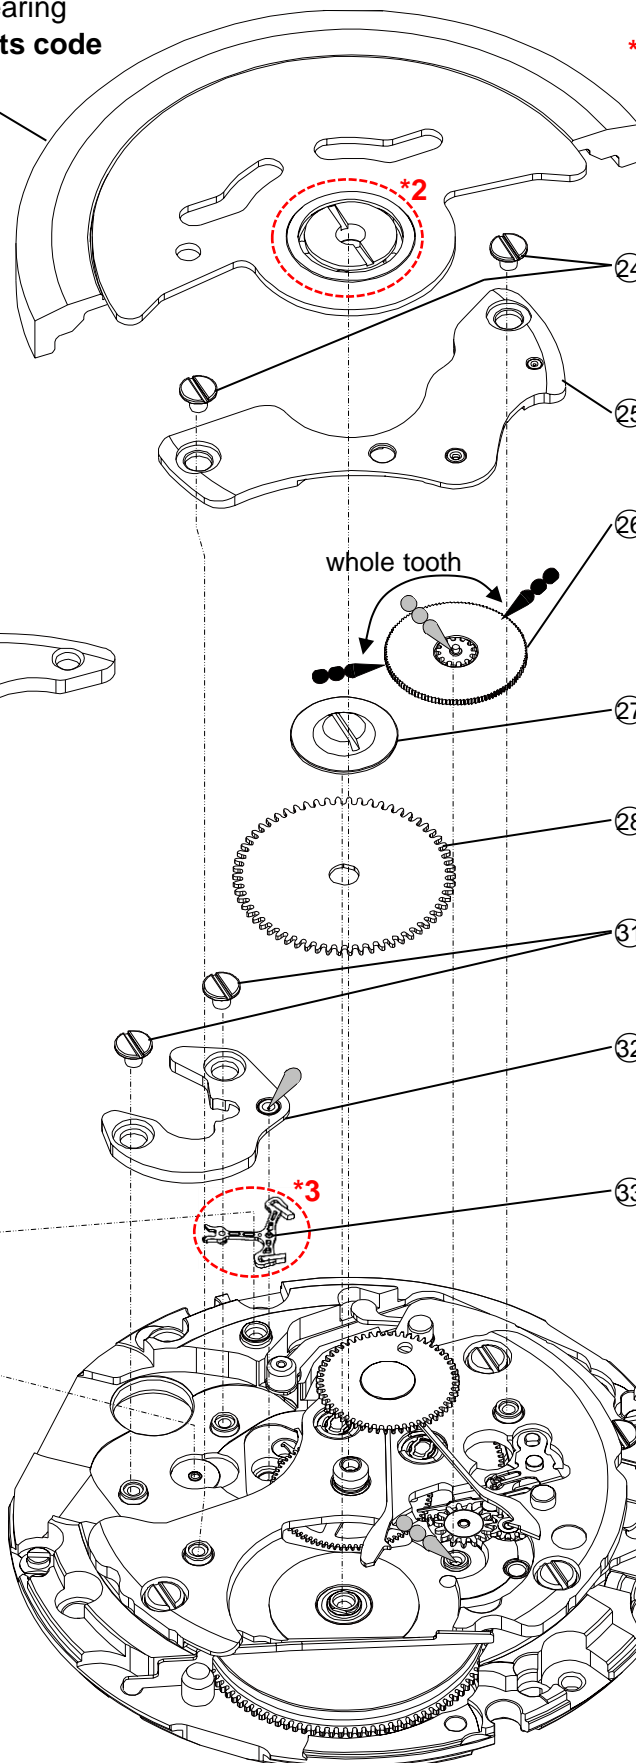

Disassembling procedures Figs.

① → ⑤⑧

Reassembling procedures Figs.

⑤⑧ → ①

Type of oil

Moebius 9010

A9a (S-4)

A9a (S-6)

Oil quantity mark


Normal quantity

Sufficient quantity

③⑨ 0511 010


First reduction wheel

Refer to page 13 for oiling spot



③⑧ 0831 183

Pawl lever

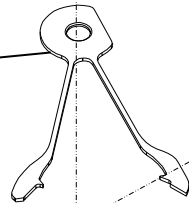

③⑦ 0836 002




Reduction wheel holder



④② Fourth wheel and pinion

Refer to page 11 for each parts code

*1

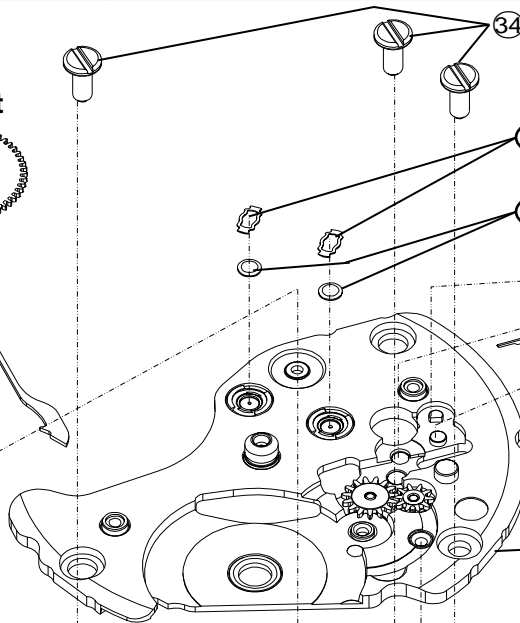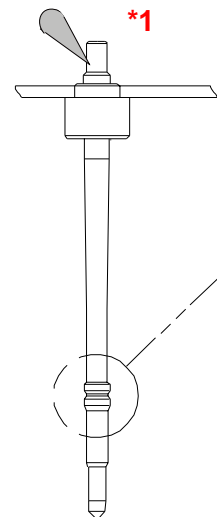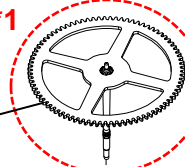

③④ 0012 100

Barrel and train wheel bridge screw

③⑤-① Cap jewelled spring

③⑤-② Cap jewel

③⑥ 0363 184

Ratchet sliding wheel spring

③⑤ 0114 183

Barrel and train wheel bridge with hole jewel frame
Refer to page 13 for oiling spot

④① 0436 166

Lower plate for barrel and train wheel bridge

④① 0012 354

Lower plate for barrel and train wheel bridge screw

④③ 0231 070


Third wheel and pinion

④④ 0381 004

Click

④⑤ 0201 083

Barrel complete with main spring

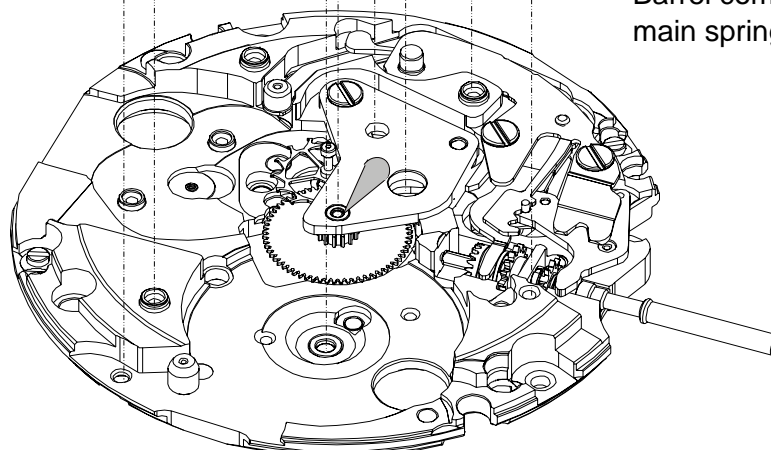

Disassembling procedures Figs.

① → ⑤⑧

Reassembling procedures Figs.

⑤⑧ → ①

Type of oil

Moebius 9010


A9a (S-4)

A9a (S-6)

Oil quantity mark

Normal quantity

Sufficient quantity

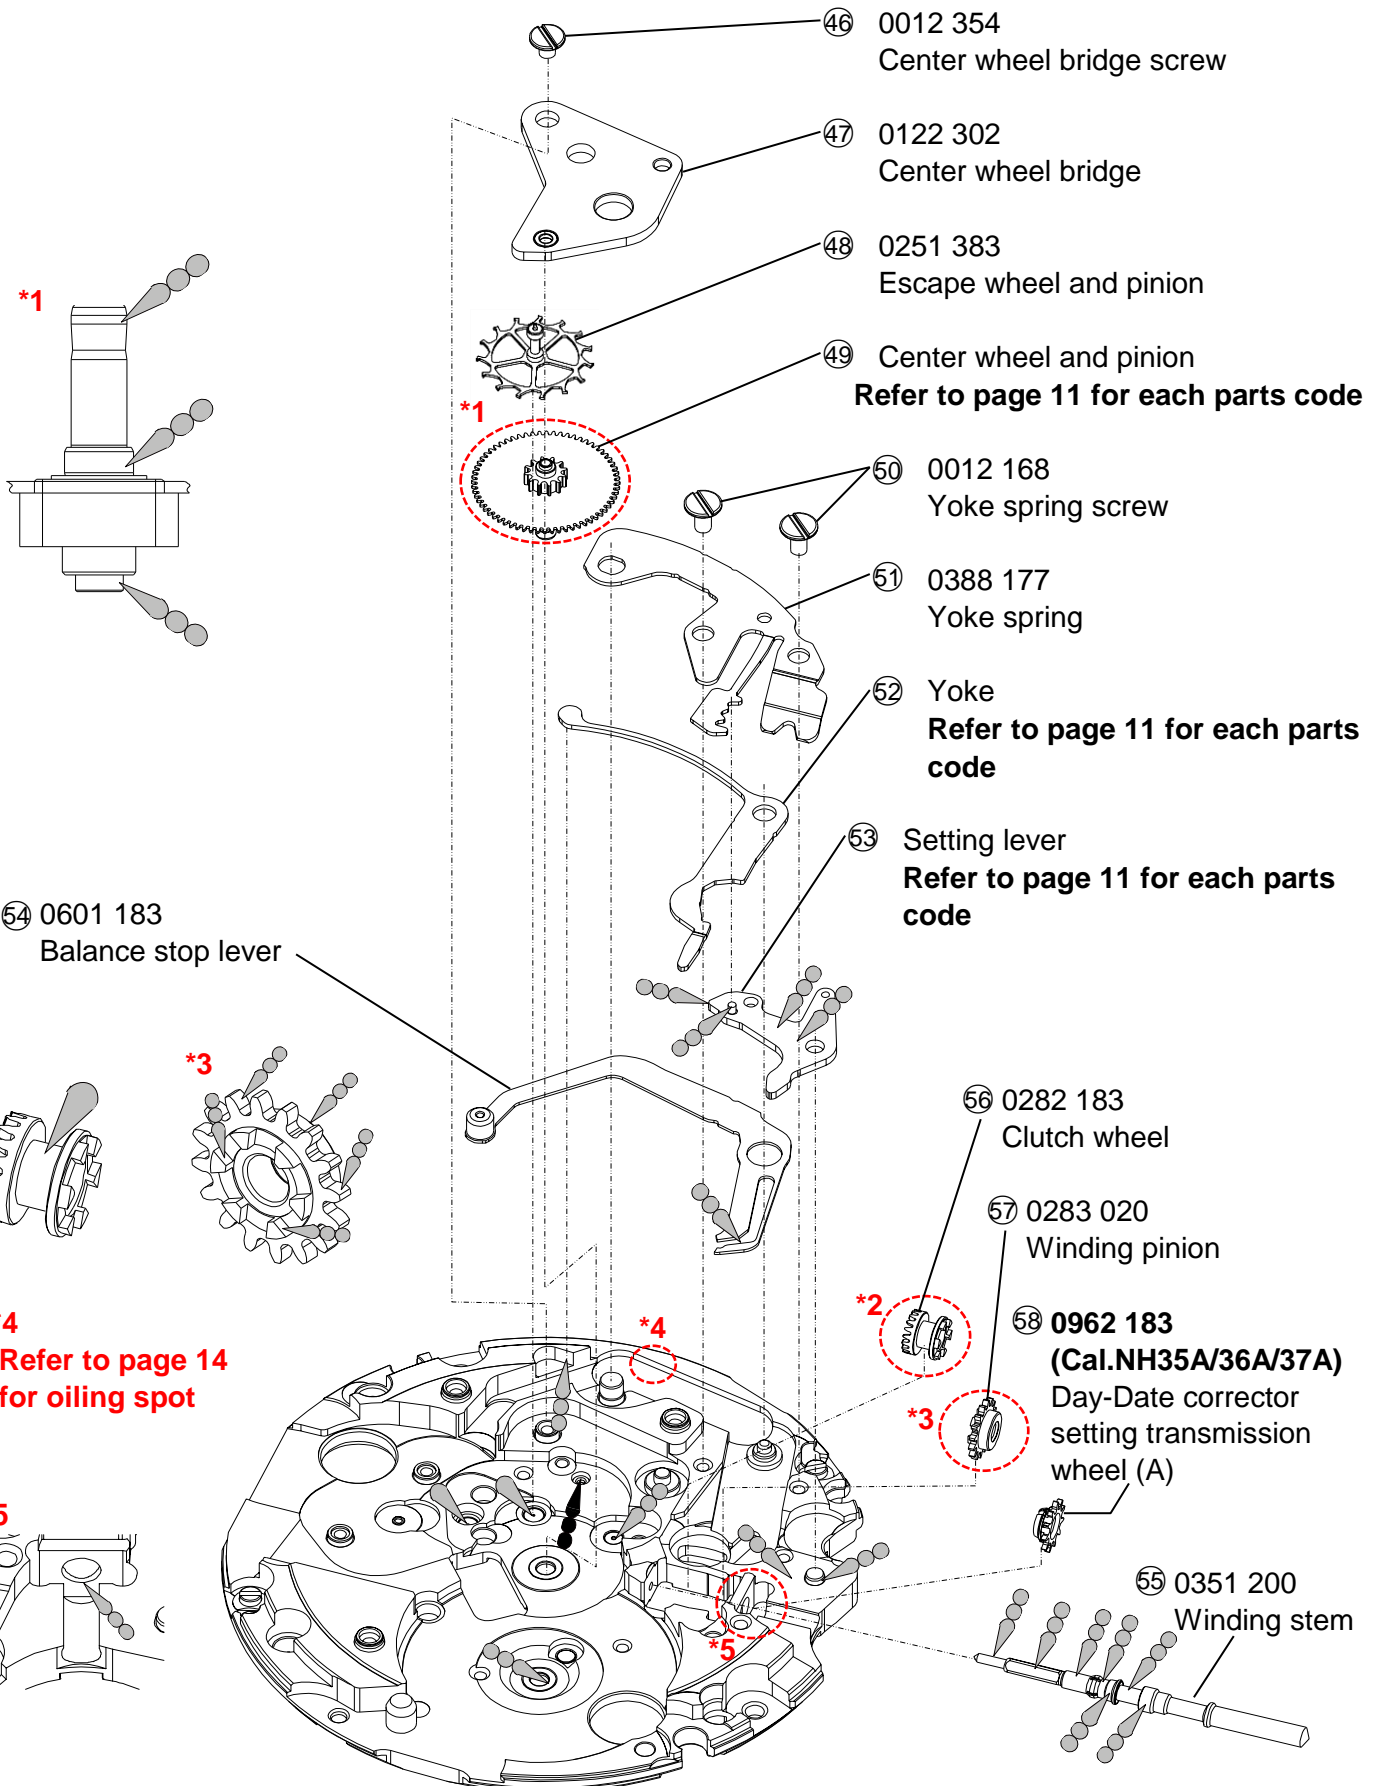

② Day star with dial disk (Cal.NH36A only : Page 5)

Parts code	Position of crown	Position of day frame	Color of letters	Color of background	Language
0160 495	3H	3H	MON~FRI : Black SAT : Blue SUN : Red	White	English & Spanish

Date dial

Page	No	Cal.	Parts code	Position of crown	Position of day frame	Color of letters	Color of background
3	⑤	NH34	0878 208	3H	3H	Black	White
		NH35 NH37					
5	⑥	NH36	0878 206	3H	3H	Black	White

⑱ Cannon pinion (Page 6)

Cal.	Parts code	Cal.	Parts code
NH35 NH36	0225 425	NH37	0225 426

⑰ Cannon pinion (Page 7)

Cal.	Parts code	Cal.	Parts code
NH38	0225 425	NH39	0225 426

⑳ Oscillating weight with ball bearing (Page 8)

Cal.	Parts code	Marking	Cal.	Parts code	Marking
NH34	1509 257	Japan mark	NH37	0509 470	Japan mark
	1509 258	Malaysia mark		0509 471	Malaysia mark
NH35	0509 467	Japan mark	NH38	0509 476	Japan mark
	0509 468	Malaysia mark		0509 477	Malaysia mark
NH36	0509 463	Japan mark	NH39	0509 473	Japan mark
	0509 464	Malaysia mark		0509 474	Malaysia mark

⑳-1 Balance complete with stud (Page 8)

Cal.	Parts code	Cal.	Parts code
NH34 NH35 NH36 NH37	0310 183	NH38 NH39	0310 184

⑳ Fourth wheel and pinion (Page 9)

Cal.	Parts code	Cal.	Parts code
NH35 NH36 NH38	0144 184	NH34 NH37 NH39	0144 185

㉑ Center wheel and pinion (Page 10)

Cal.	Parts code	Cal.	Parts code
NH35 NH36 NH38	0221 183	NH34 NH37 NH39	0221 185

㉒ Yoke (Page 10)

Cal.	Parts code	Cal.	Parts code
NH34 NH35 NH36 NH37	0384 183	NH38 NH39	0384 184

㉓ Setting lever (Page 10)

Cal.	Parts code	Cal.	Parts code
NH34 NH35 NH36 NH37	0383 185	NH38 NH39	0383 186

■ Remarks : Different parts for each CAL.

Page	No	Cal.					Parts code	Parts name	Parts form
		NH35	NH36	NH37	NH38	NH39			
6	⑭	○	-	-	-	-	0273 182	Hour wheel 0273 182 & 0273 184 (Height difference)	
		-	○	-	-	-	0273 183		
		-	-	○	-	-	0273 184		
7	③	-	-	-	○	-	0273 183	Hour wheel 0273 183 & 0273 185 (Height difference)	
		-	-	-	-	○	0273 185		
6	⑯	○	○	-	-	-	0817 300	Intermediate date driving wheel and pinion	
		-	-	○	-	○		Intermediate 24hour wheel and pinion	
6	⑰	○	○	-	-	-	0802 183	Date indicator driving wheel	
		-	-	○	-	-	0157 182	24hour wheel	



■ List of screw

Page	No	Parts code	Parts name	Parts form	Page	No	Parts code	Parts name	Parts form	
3	②	0012 354	Date indicator maintaining plate screw (x4)		4	⑧	0012 485	Guard for day-date corrector setting transmission wheel screw (x2)		
5	④				6	⑨				
7	①				Hour wheel guard screw (x4)	8	⑳	0012 919	Ratchet wheel screw	
8	⑳				Automatic train bridge screw (x2)	8	㉑	0012 100	Balance bridge screw	
	㉑		Pallet bridge screw (x2)							
9	㉒		Lower plate for barrel and train wheel bridge screw		9	㉒	Barrel and train wheel bridge screw (x3)			
10	㉓	Center wheel bridge screw								
10	㉔	0012 168	Yoke spring screw (x2)							




Type of oil	
	Moebius 9010
	A9a (S-4)
	A9a (S-6)
Oil quantity mark	
	Normal quantity
	Sufficient quantity

1. Oiling spot

③⑤ Barrel and train wheel bridge with hole jewel frame

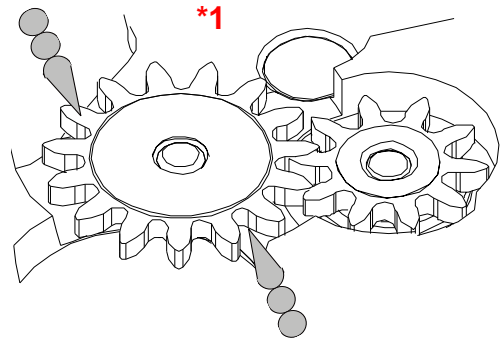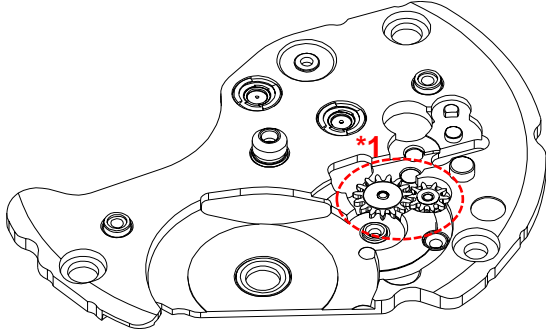


Barrel and train wheel bridge with hole jewel frame (back side)

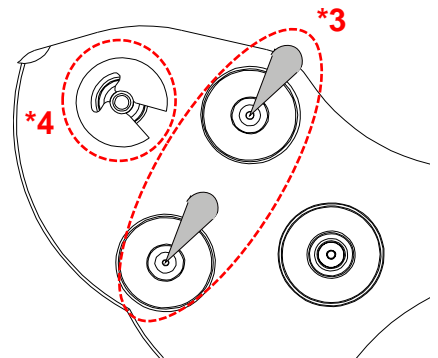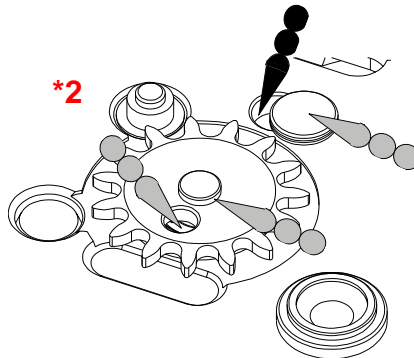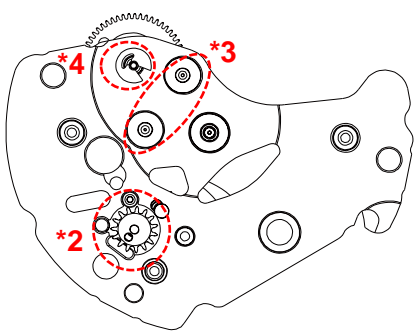

Note

***2** After oiling, set lower plate for barrel and train wheel bridge & screw.

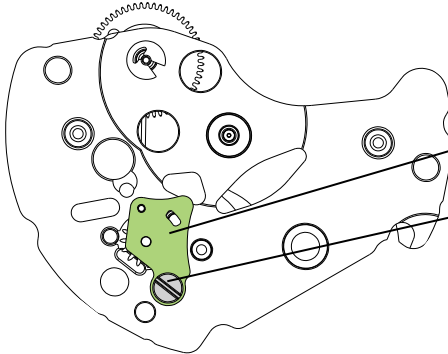


④⑩ Lower plate for barrel and train wheel bridge

④⑪ Lower plate for barrel and train wheel bridge screw


***4** After oiling, set first reduction wheel & pawl lever & reduction wheel holder.

③⑨ First reduction wheel

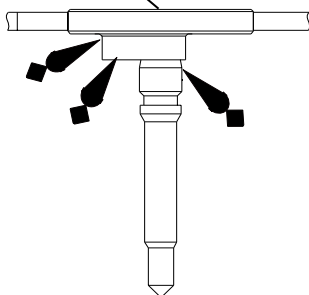

③⑨ First reduction wheel



③⑧ Pawl lever

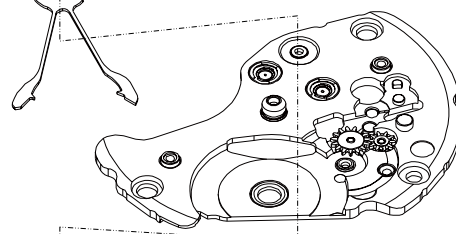

③⑦ Reduction wheel holder

⑤④ Balance stop lever

Main plate


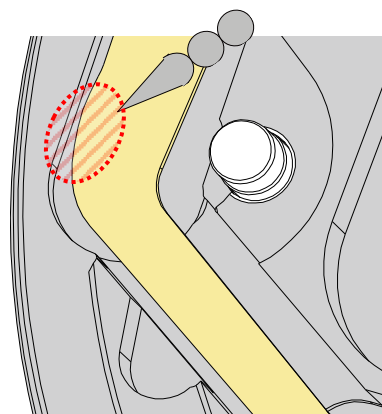
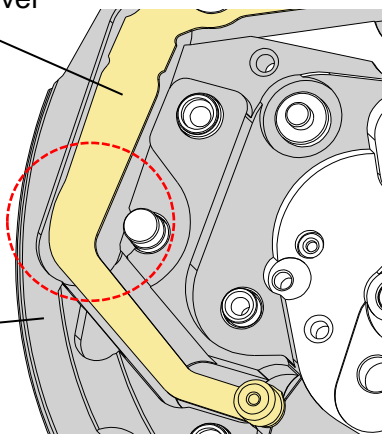


Contact part of main plate and balance stop lever

2. Setting position of oscillating weight

- Before assembling oscillating weight

Match the center of the oscillating weight and winding stem. Set the hole of first reduction wheel gear on the imaginary line toward the balance bridge guide pin.

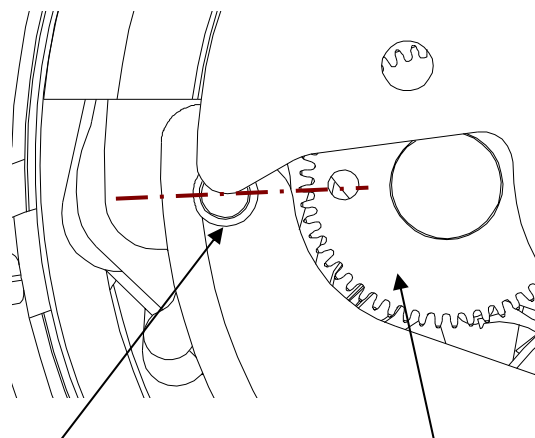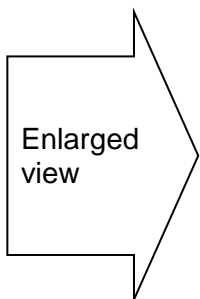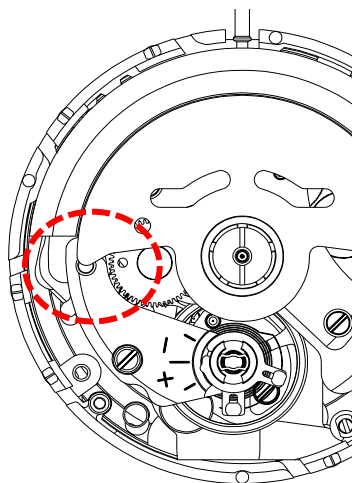


Balance bridge guide pin

First reduction wheel gear

3. To remove the winding stem


- 1) Set the winding stem to normal position
- 2) Pull out the winding stem, while pushing "A"

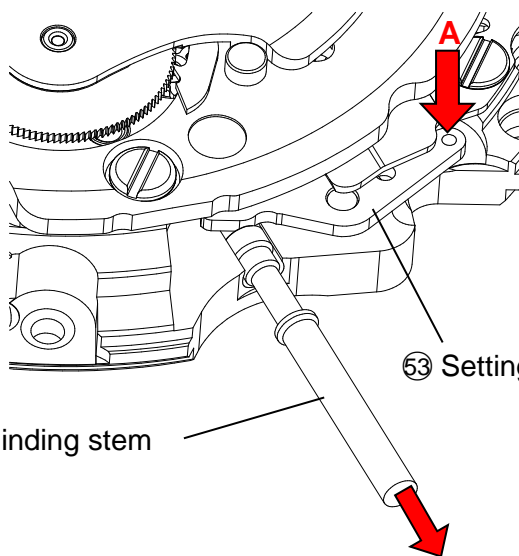


⑤③ Setting lever

⑤⑤ Winding stem

4. Disassembling / assembling of the First reduction wheel

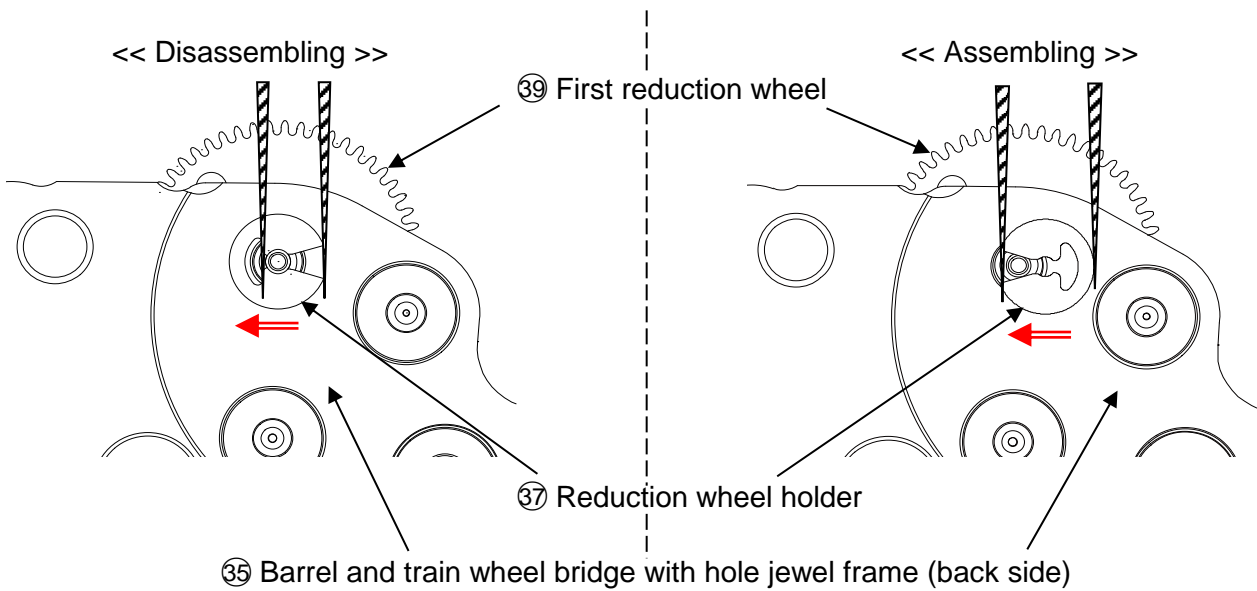


5. Disassembling / assembling of the Ratchet sliding wheel spring

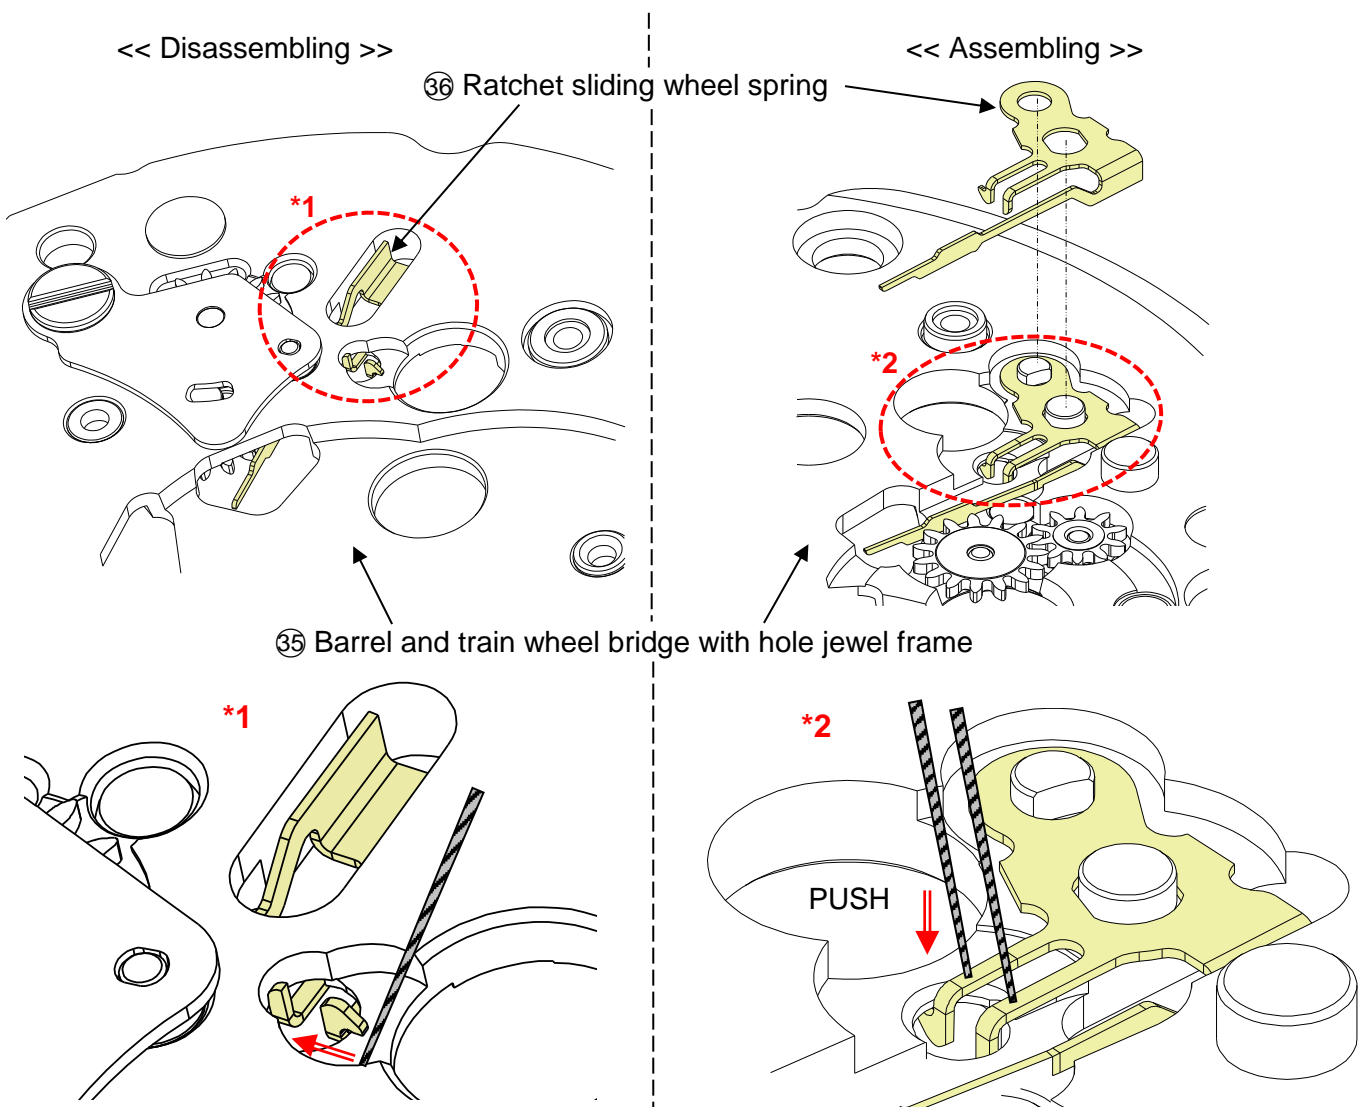

Remove the hook of the ratchet sliding wheel spring from barrel and train wheel bridge with hole jewel frame.

The hooks of ratchet sliding wheel spring are hung up on barrel and train wheel bridge with hole jewel frame.



6. Accuracy adjustment

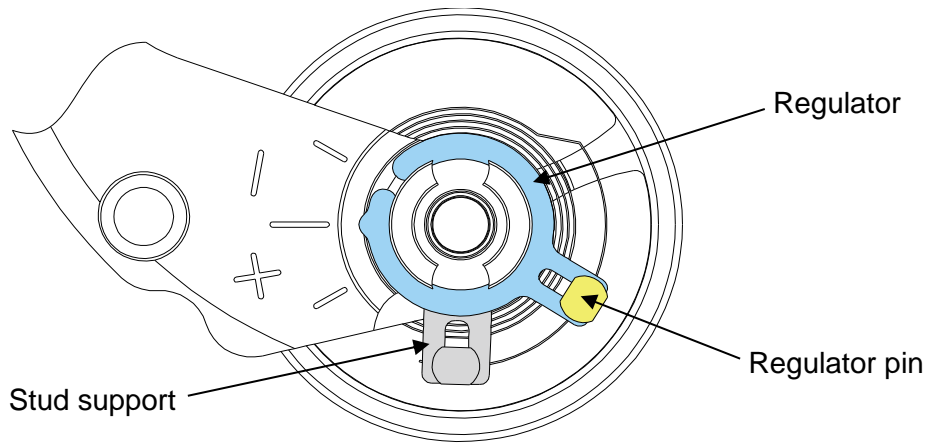


Note:

• Regulator (Time adjustment)


• Stud support (Beat error adjustment)

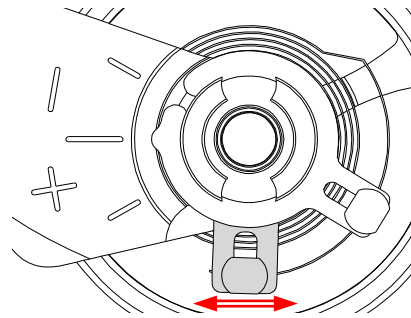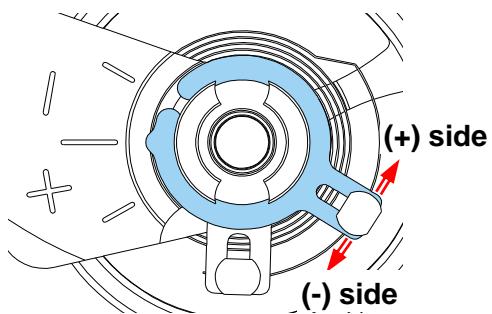


• Regulator pin (Gap adjustment of balance spring and regulator pin)

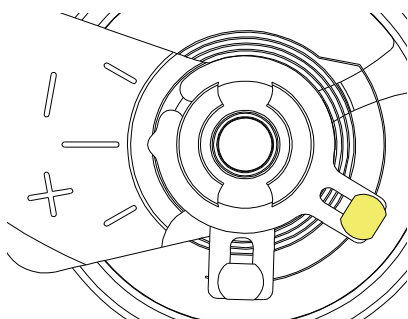

Anticlockwise rotation

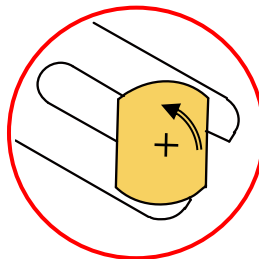

No clockwise rotation

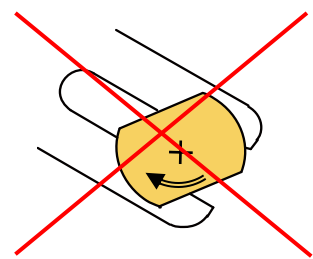


7.To wind up the mainspring


<<Movement>>

- Manual winding (Fully wound up by turning the crown minimum 55 times)
- Screwdriver winding (Fully wound up by turning the ratchet wheel screw 8 times)

[Manual winding]

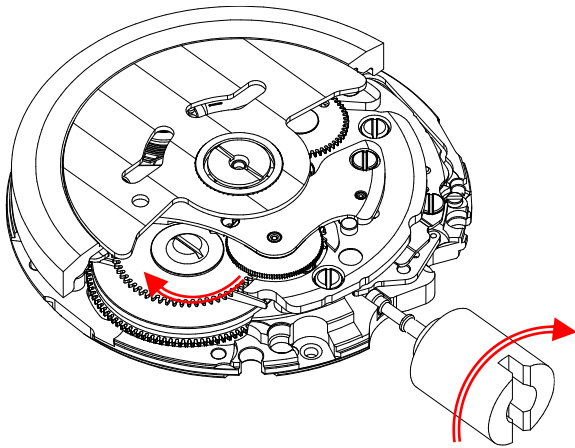

[Screwdriver winding]

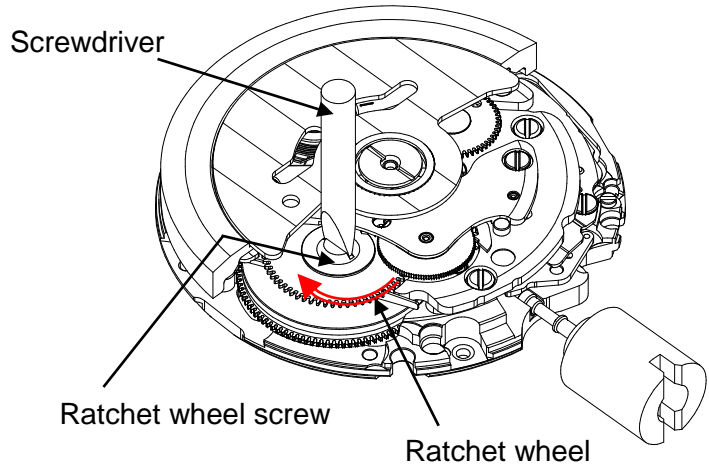

8.How to install hands

Place the movement directly on a flat metal plate or something similar to install the hands.


We recommend the use of movement holder to install hands.

For hands attachment, please use a special equipment.

When the movement receives a strong shock, it may be damaged.

***Install the 24hour hand (Cal.NH37A/39A)**

Pull out the crown to the second click position and rotation it clockwise to install 24hour hand.

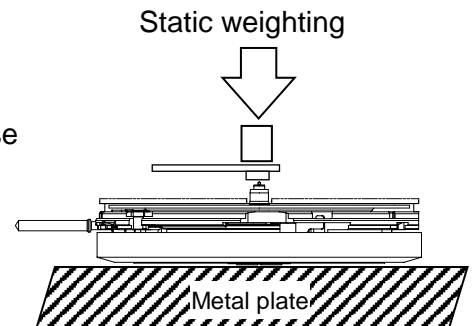

9.Accuracy measurement condition

Static Accuracy : - 20 ~ + 40 seconds per day


Measurement Conditions





- 1) Measurement should be done within 10 ~ 60 minutes after fully wound up.
- 2) Lift angle : 53 deg
- 3) Measurement position : (1) Dial up (2) 9 o'clock up (3) 6 o'clock up
- 4) Minimum measurement Time : 20 seconds
- 5) Stabilizing Time :

Leave the watch for at least 20 seconds to stabilize after you change its measurement position.

10.About the handling (Cal.NH38A/39A)

- Part is processed as a mirror surface. It is damaged when touching with tweezers. Please be careful about the handling.

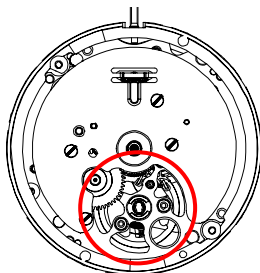

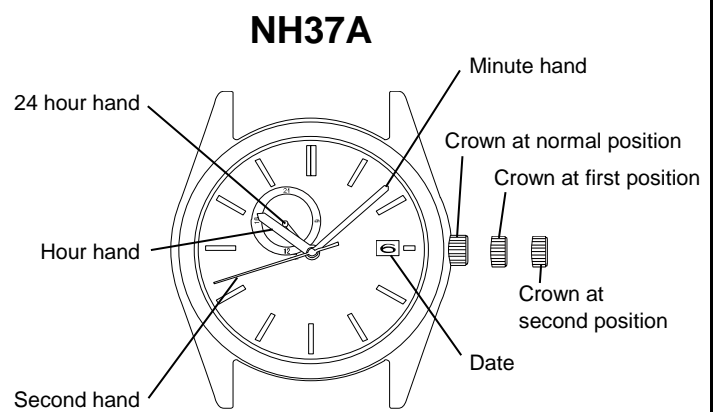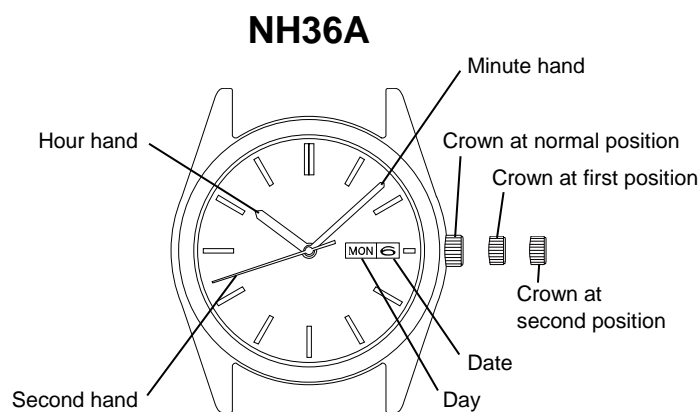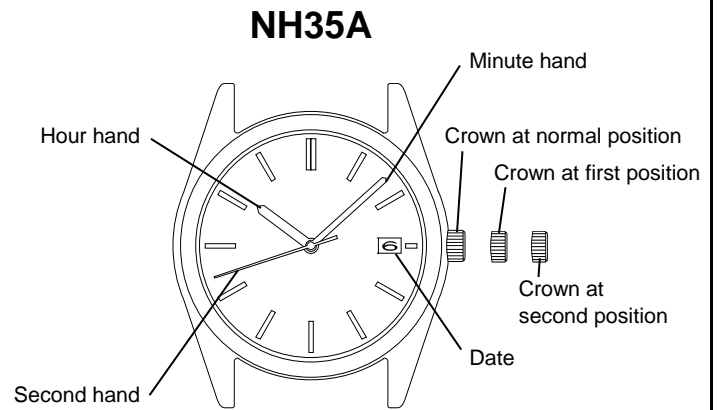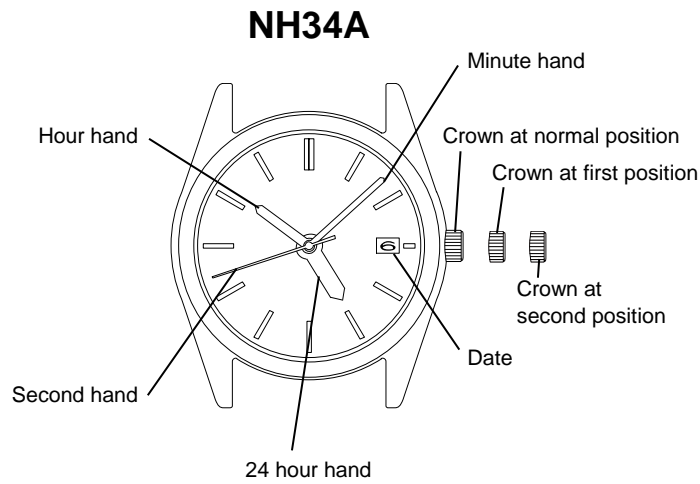

1.How to set the time



- 1) Pull out the crown to the second click position.
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly)
- 3) Push the crown back into the normal position.

2.How to set the Date & Time difference

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to left for date setting.
- 3) Turn the crown to right for day setting. (Cal.NH36A only)
*Do not set the date between 9:00 P.M. and 4:00 A.M. as this will cause a malfunction.
- 4) Turn the crown to right for 24 hour hand setting. (Cal.NH34A only)
- 5) Push the crown back into the normal position.

3.To wind up the mainspring

- a) Manual winding (Rotate the crown clockwise at normal position)
Fully wound up by turning the crown minimum 55 times. It will start to move naturally after shaking slightly.
- b) To wind up with winding machine.
Full wind up conditions (Reference information)
 - Rotary speed : 30 rpm
 - Operating time : 60 minutes

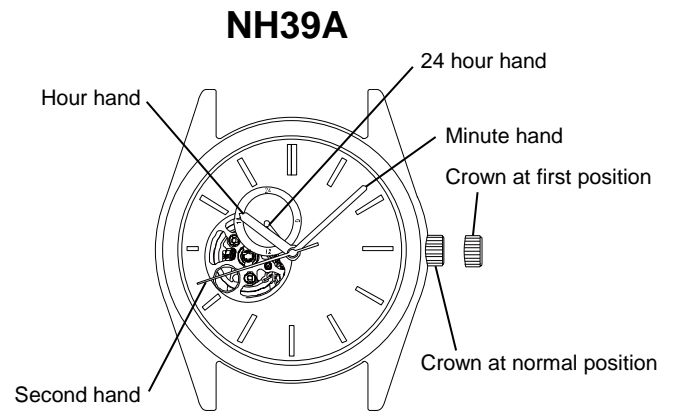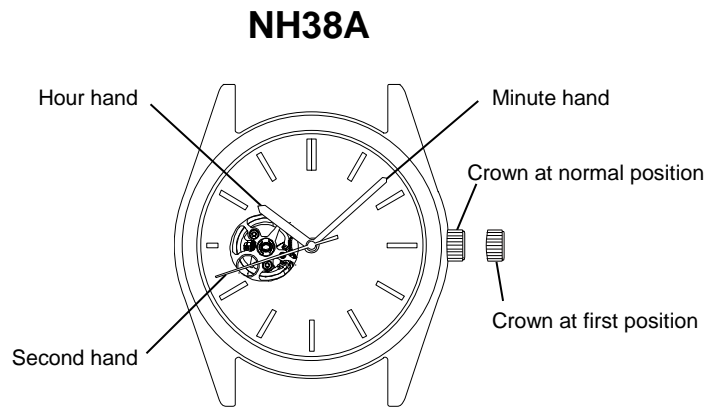

1.How to set the time

- 1) Pull out the crown to the first click position.
- 2) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly)
- 3) Push the crown back into the normal position.

2.To wind up the mainspring

- a) Manual winding (Rotate the crown clockwise at normal position)
Fully wound up by turning the crown minimum 55 times. It will start to move naturally after shaking slightly.
- b) To wind up with winding machine.
Full wind up conditions (Reference information)
 - Rotary speed : 30 rpm
 - Operating time : 60 minutes